

# M60EN166




1/1

Surinkimo schema  
Схема сборки  
Assembling scheme

Reikalingi įrankiai:

Инструменты для сборки:

Requiring tools:

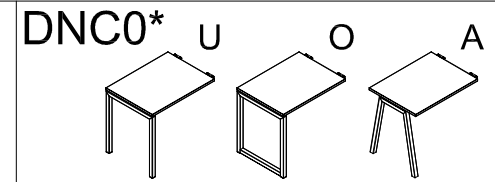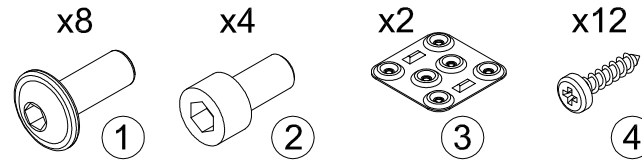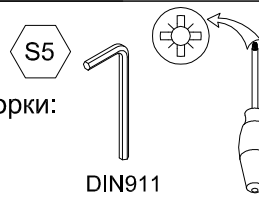

**I**

Neužveržti iki galo  
Не затянуть до конца  
Don't tighten to end

**II**

Užveržti visus varžtus  
Затянуть все болты  
Tighten up all screws

**III**

Part 4 (screws) are used to secure the back legs to the tabletop plate (part 3).

**IV**


**V**

**VI**

# M60EN010

1/1

Reikalingi įrankiai:

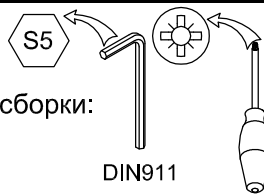


Инструменты для сборки:

Requiring tools:

DIN911

x3



x3




x3




x2



x12




x2




DNC\*


U

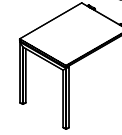


O

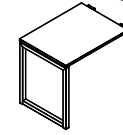






A

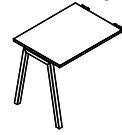

P

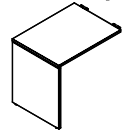

Surinkimo schema  
Схема сборки  
Assembling scheme

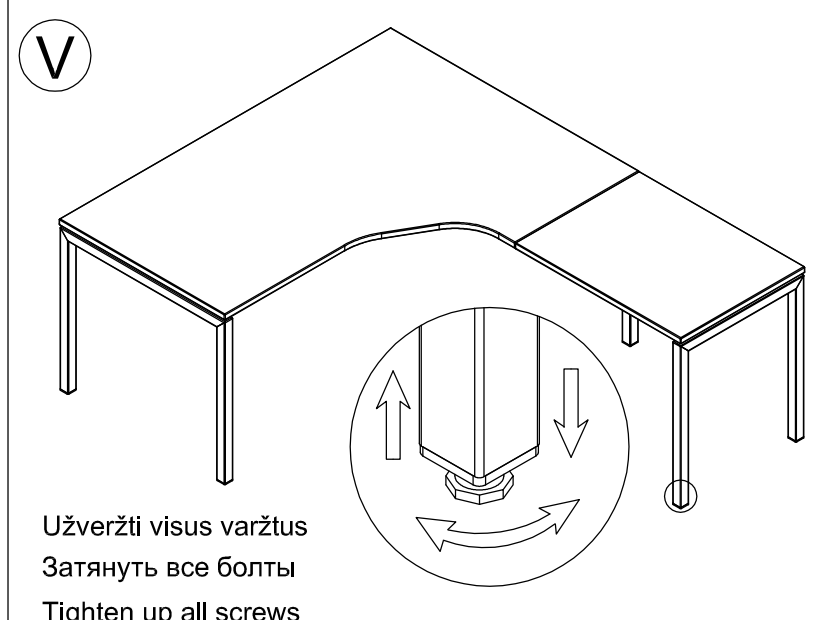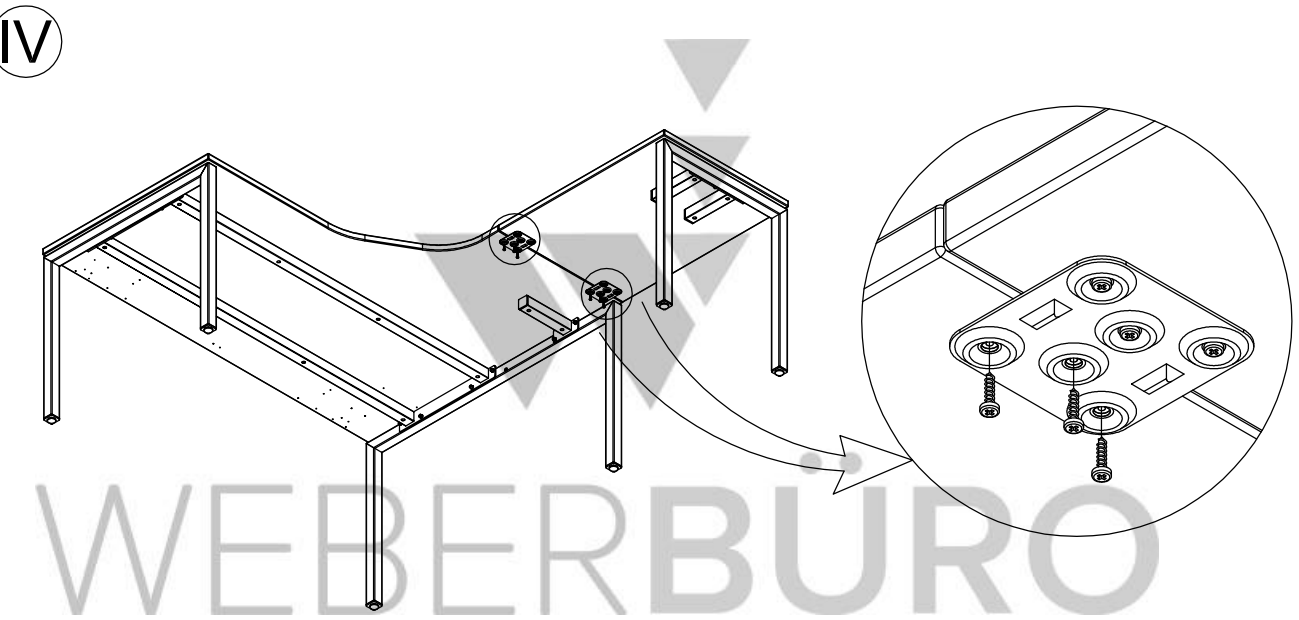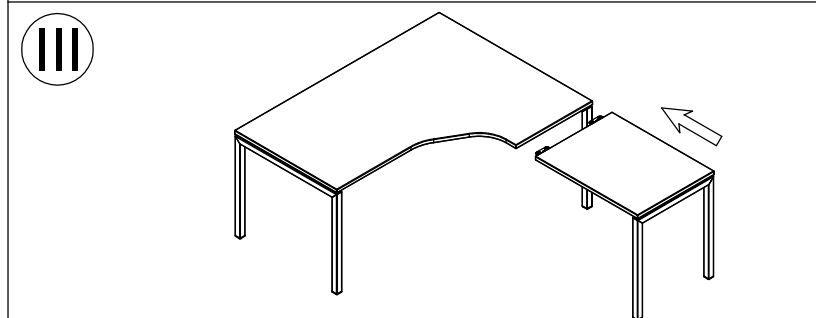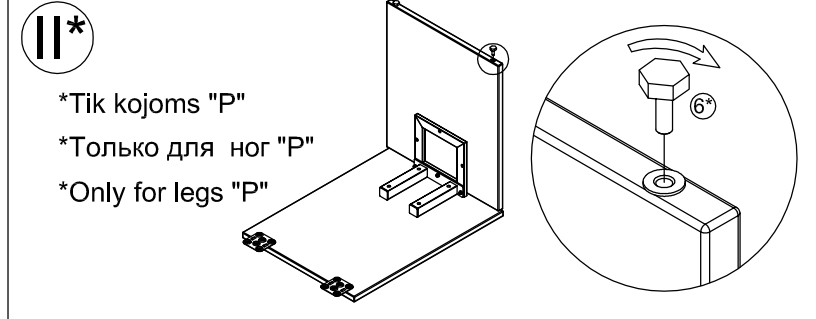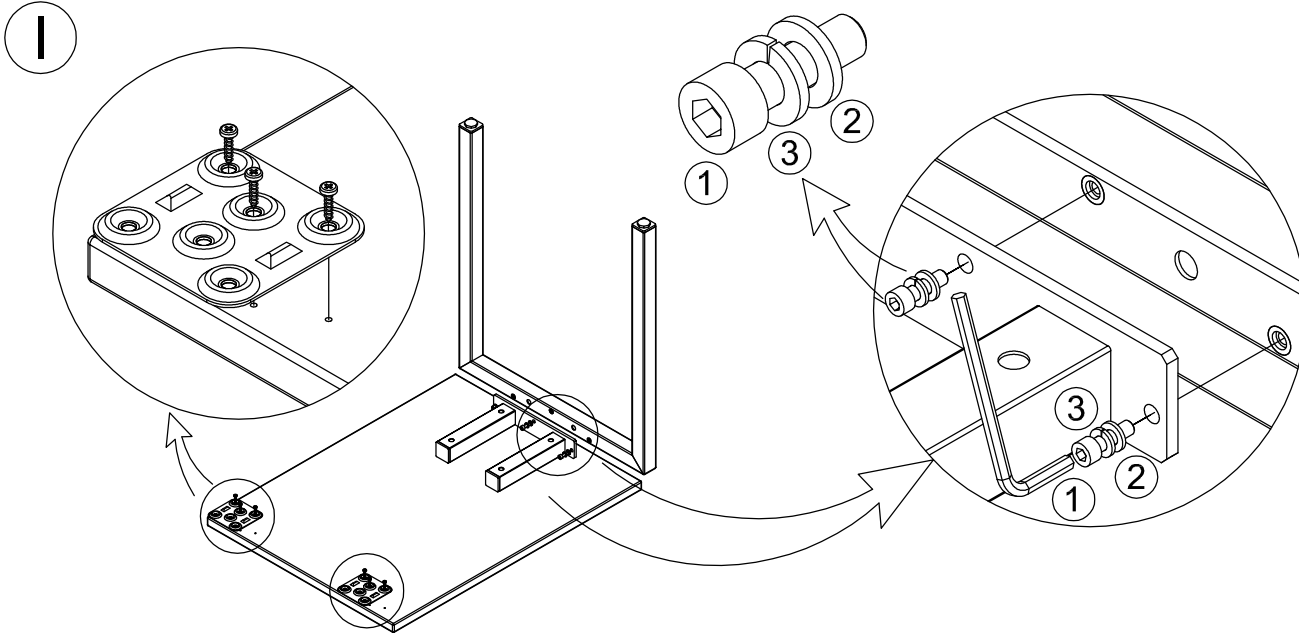

WEBERBÜRO