



M60EN306

EN Assembling scheme
 DE Montageschema
 FR Schéma d'assemblage



M6x16
M42C0238

x4



M6x16
M42C0255

x4



M6x12
M42C0043


x4




∅6
M42E0010

x4




a - x1

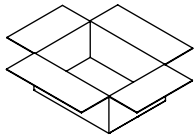


b - x2

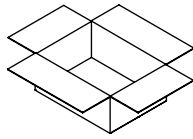


c - x2

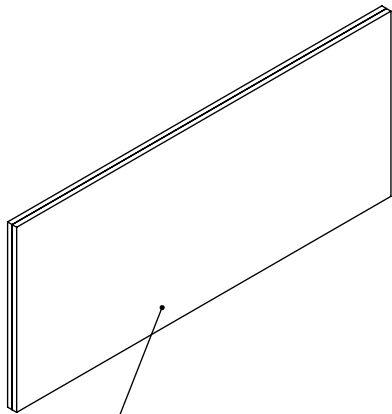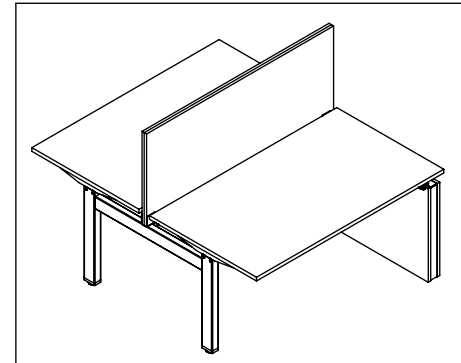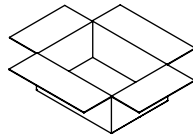

a




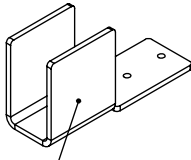


b

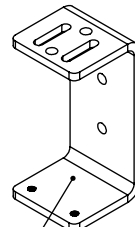

c

1

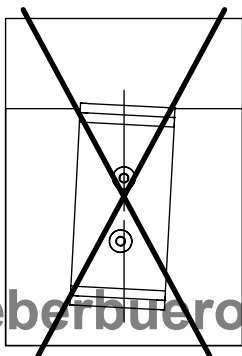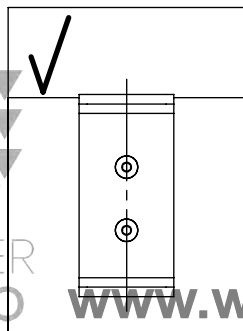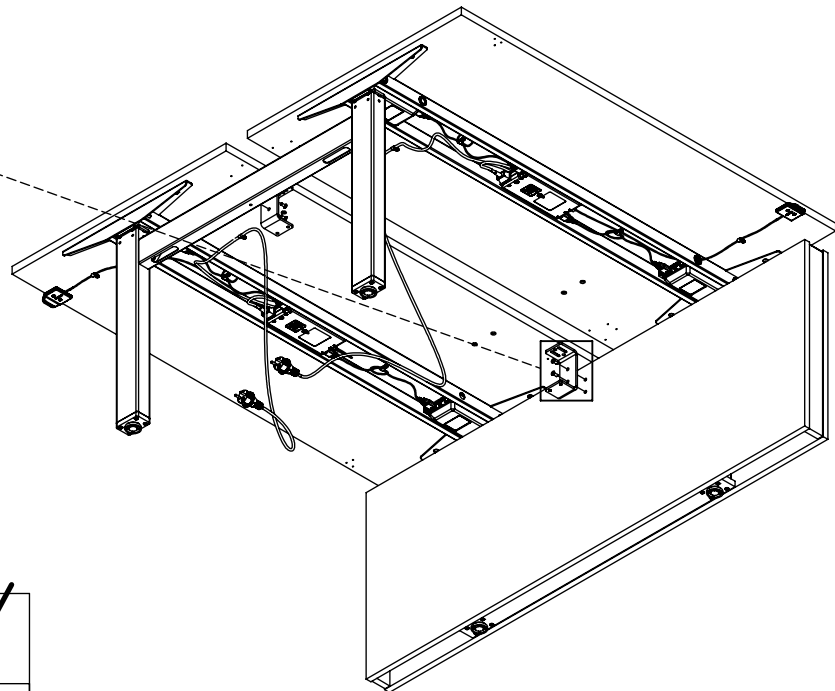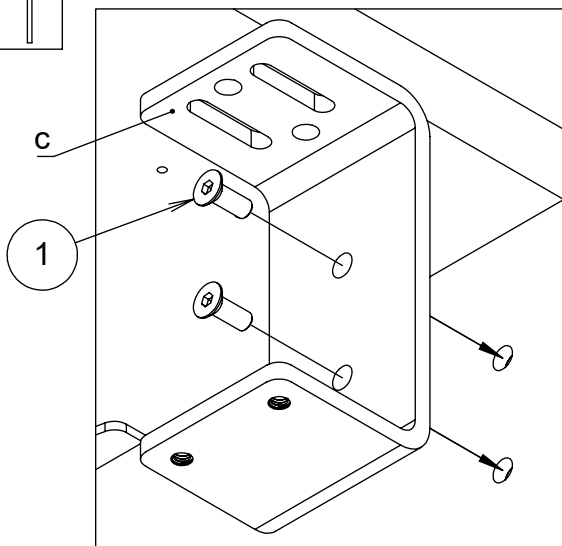


WEBER
BÜRO

www.weberbuero.de

2019-06-21

2

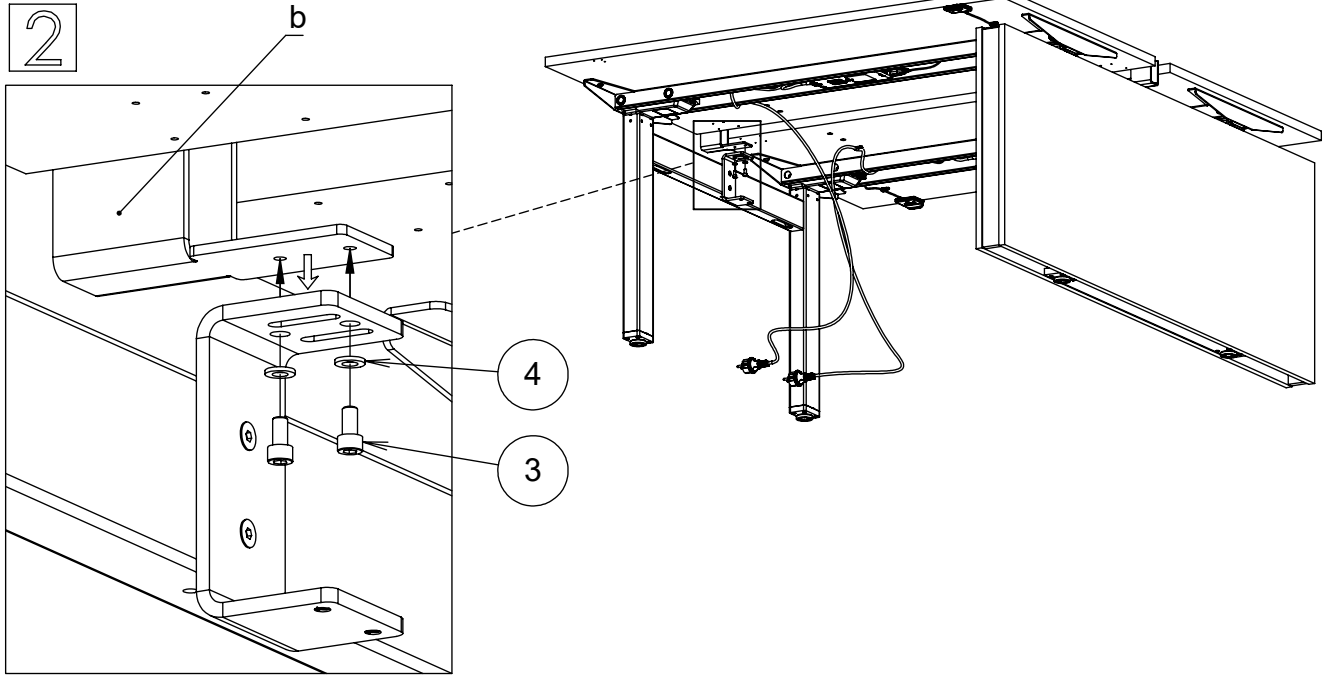

3

