



M60EC100									
EN	Assembling scheme			15/18 M42B0001	*	5/11x34 M42B0022	*	\varnothing 8x30 M42H0001	*
DE	Montageschema								
FR	Schéma d'assemblage								

a - x1 c - x2 e - *
b - x1 d - x1

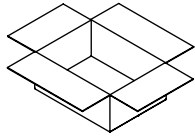


\varnothing 4/18 M45A3010	*	\varnothing 10/13 M45A2031	*	4.5x45 M42A0110	*


C1N080

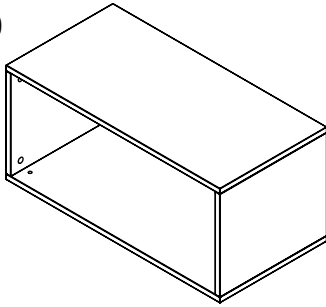


C1N081

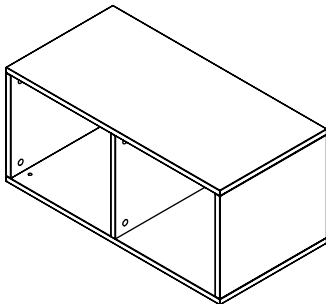


C1N120

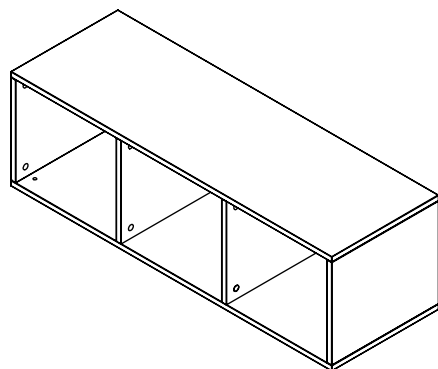

C1N100


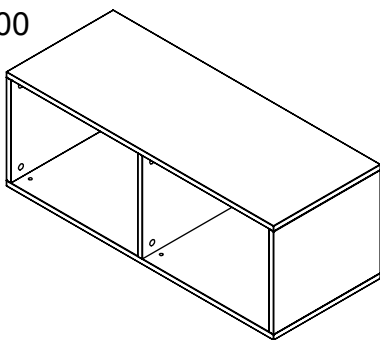


C1N160


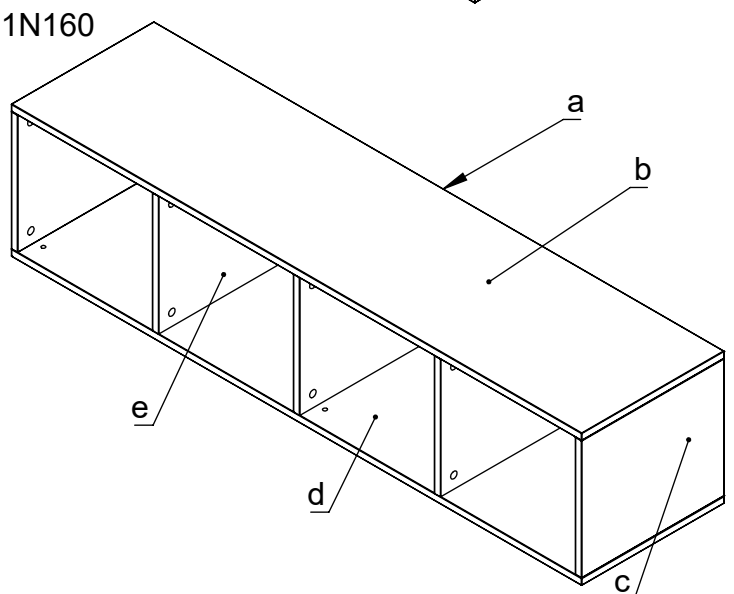


EN *Configuration depends on order option
 DE *Die Konfiguration hängt davon der Bestelloption ab
 FR *La configuration dépend de l'option de commande




1

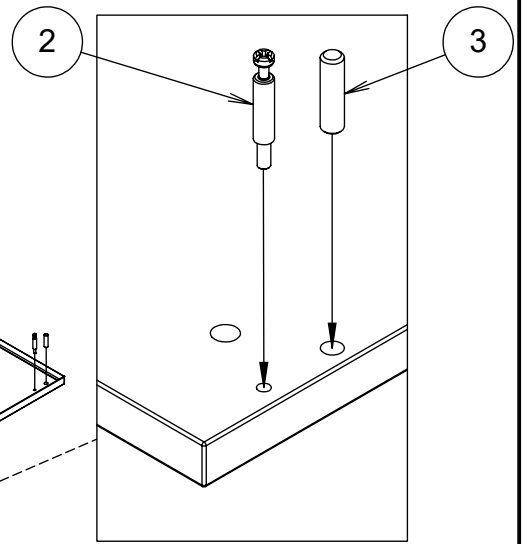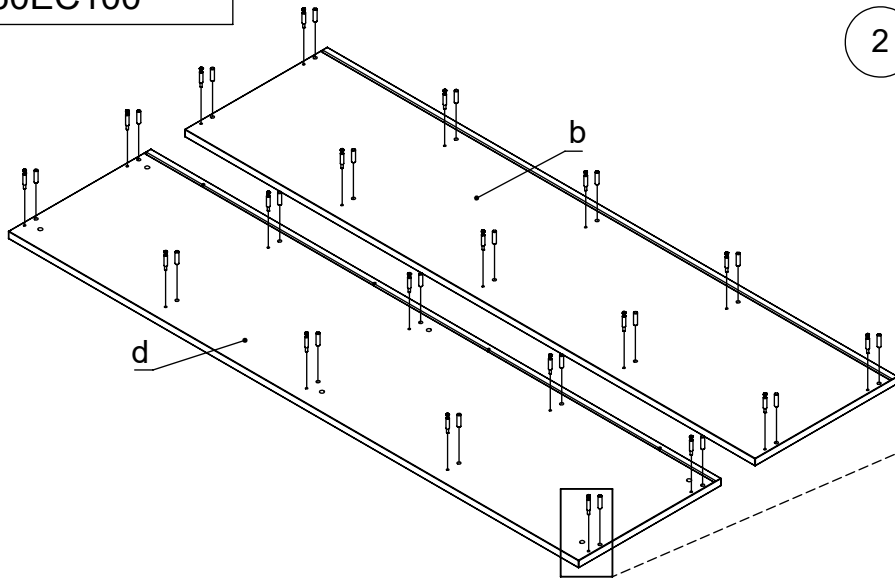


2

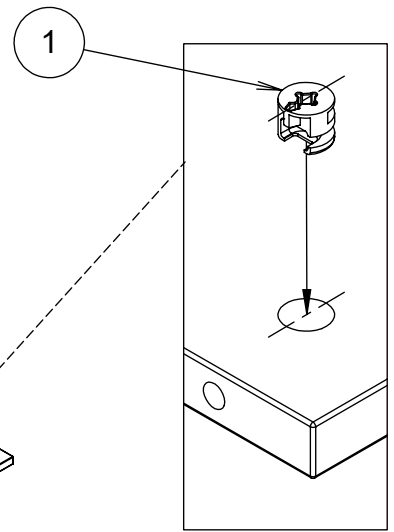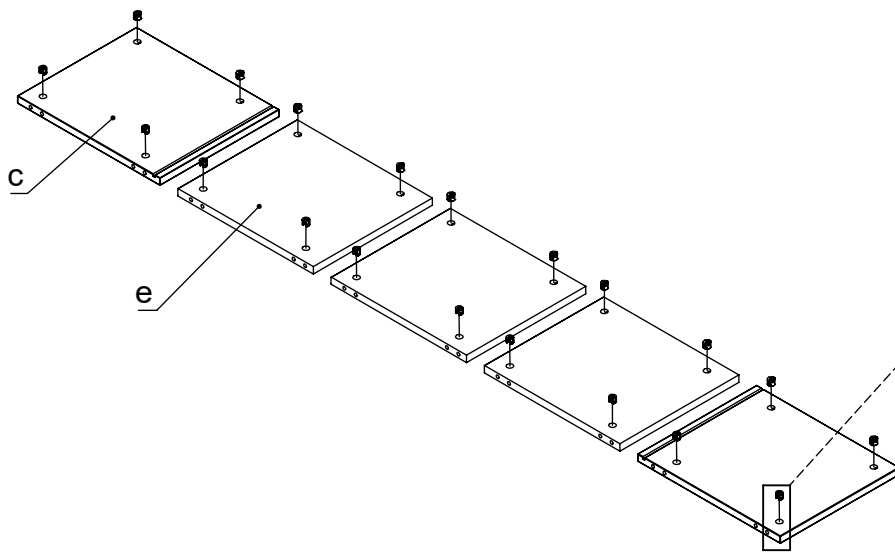



3

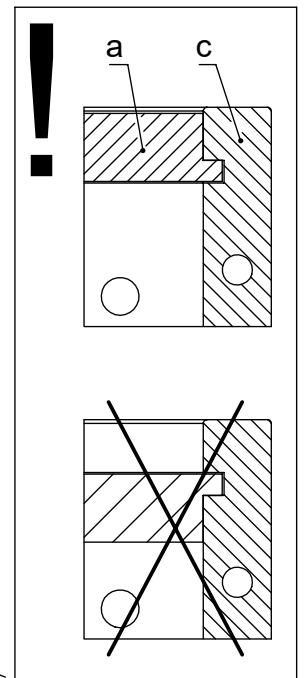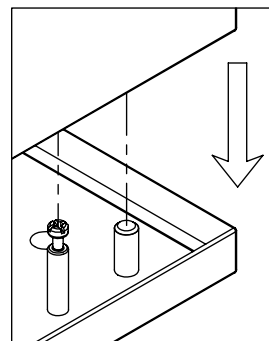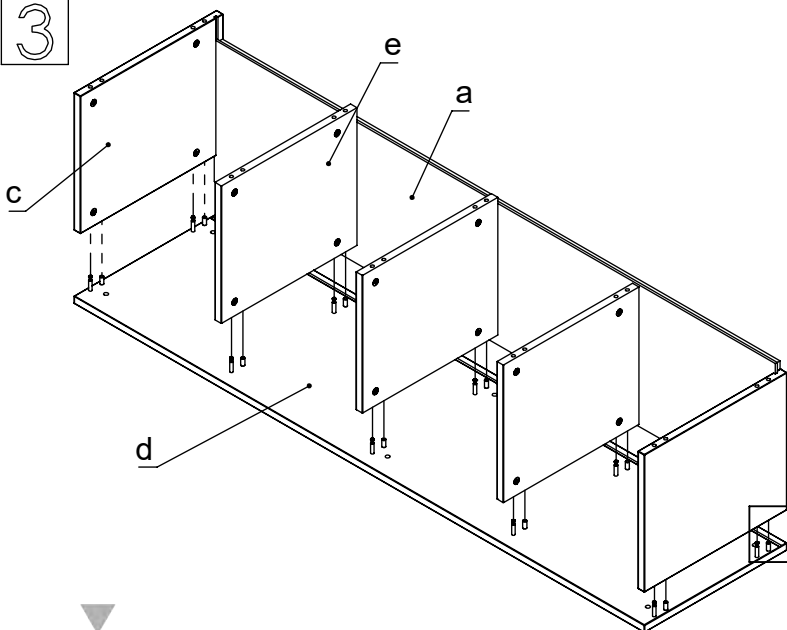



4

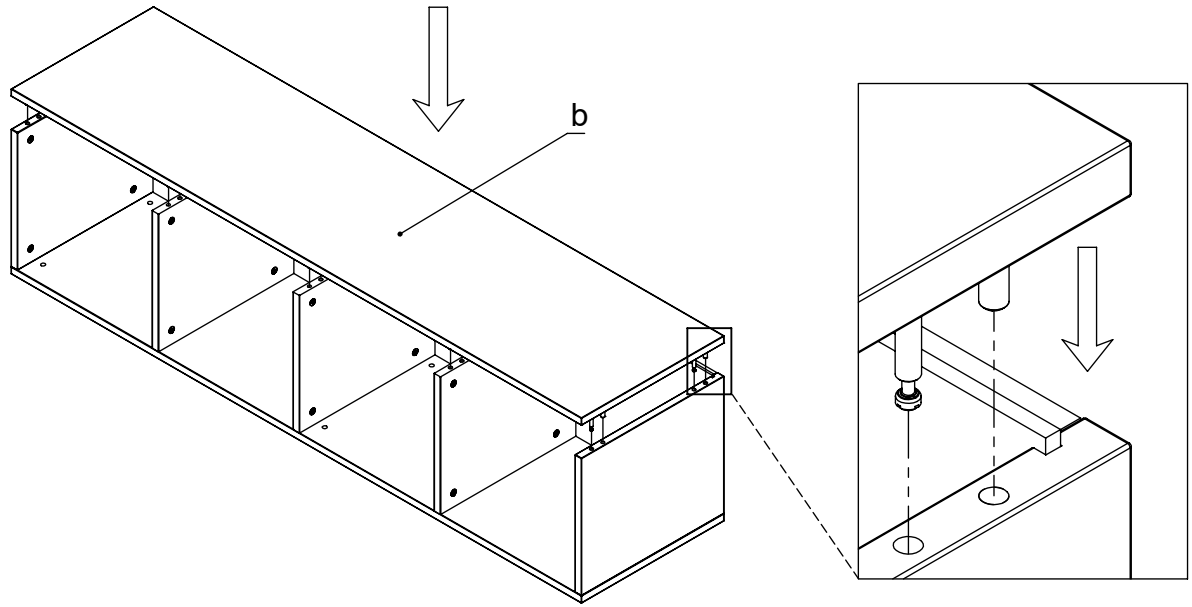

5

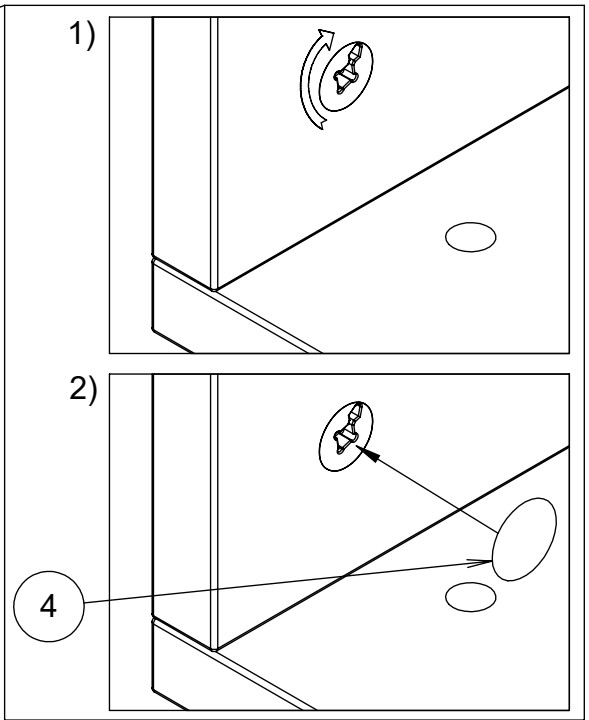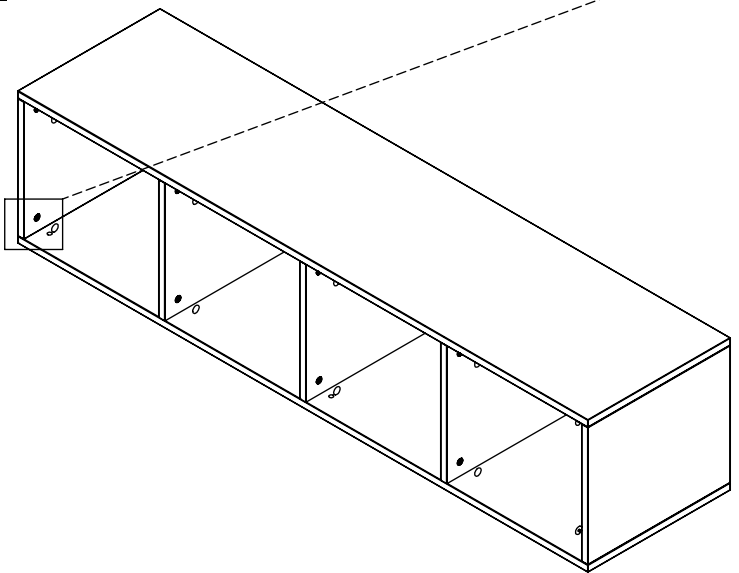

6

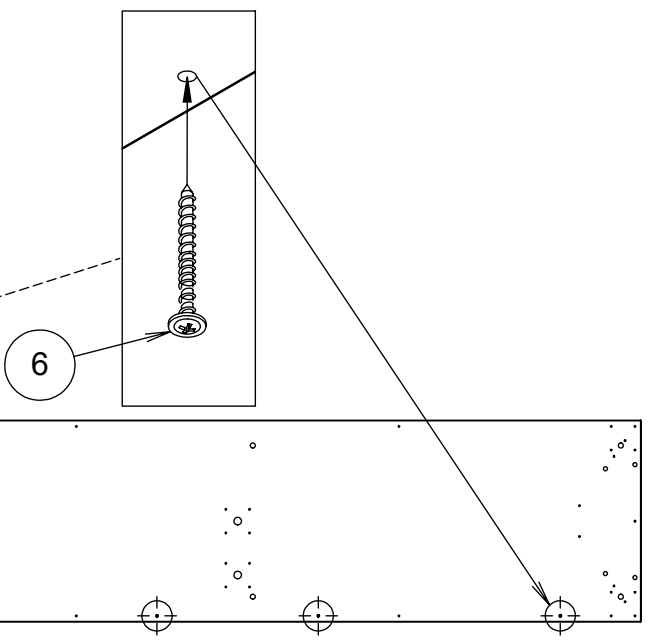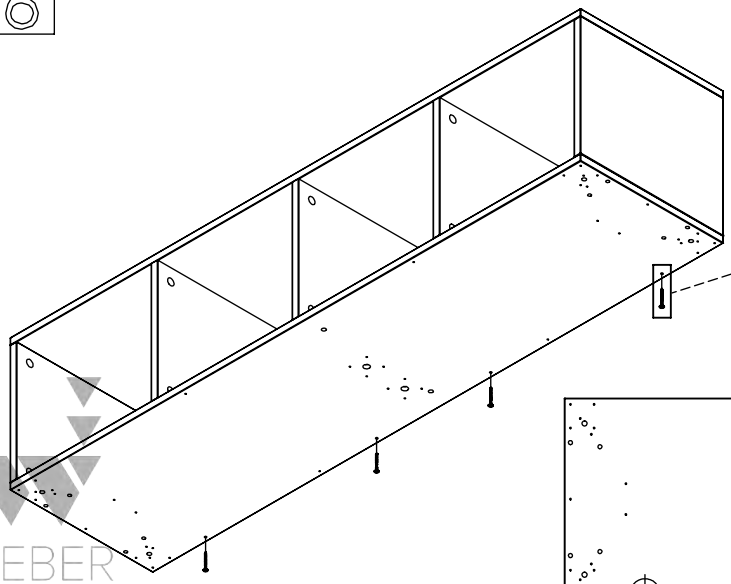


M60EC125

1 / 1


Reikalingi įrankiai:

Инструменты для сборки:

Required tools:

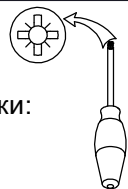


1




2



3

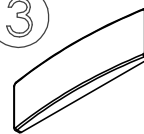


4

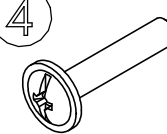


Surinkimo schema
Схема сборки
Assembling scheme


1

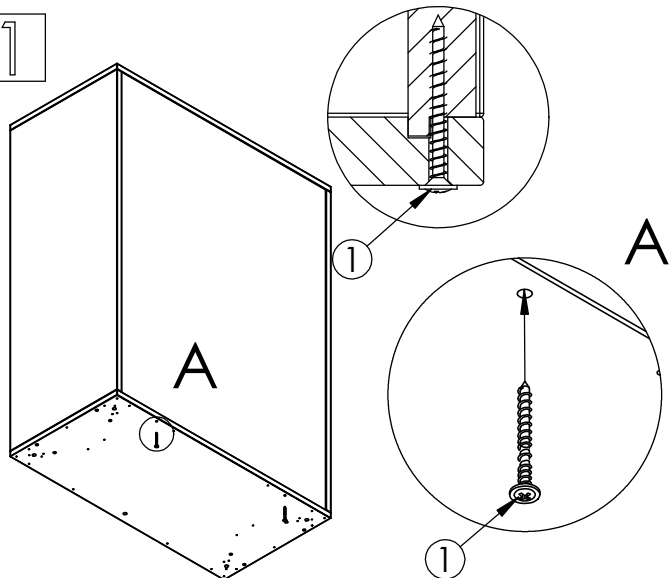


Attention! COZ053

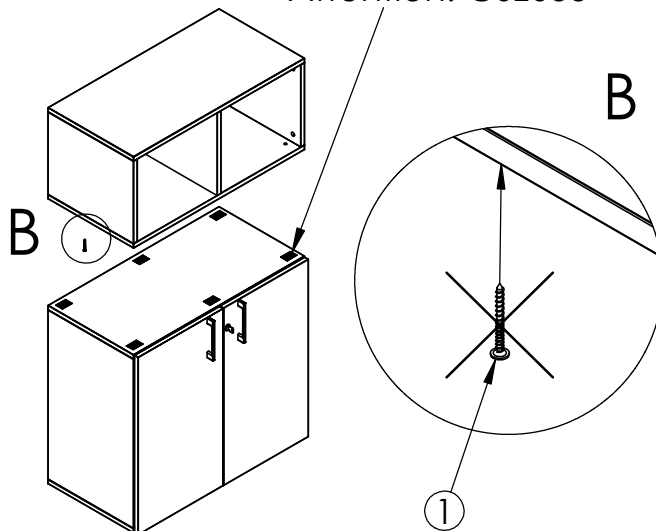


2

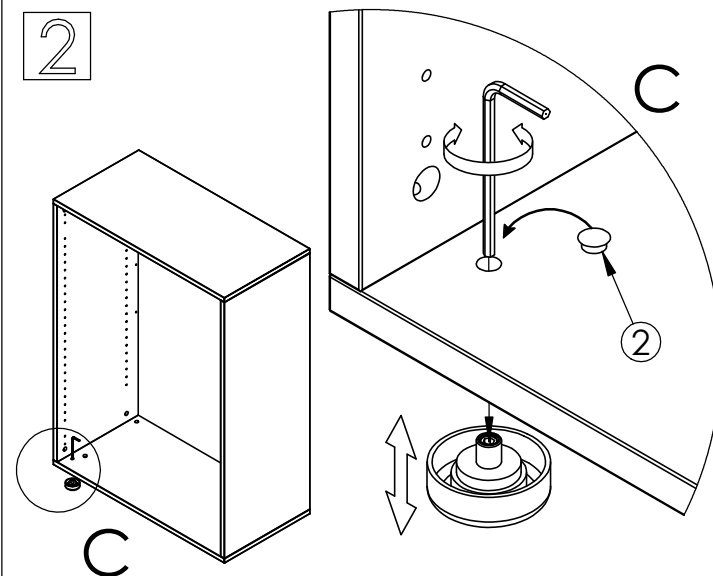

3

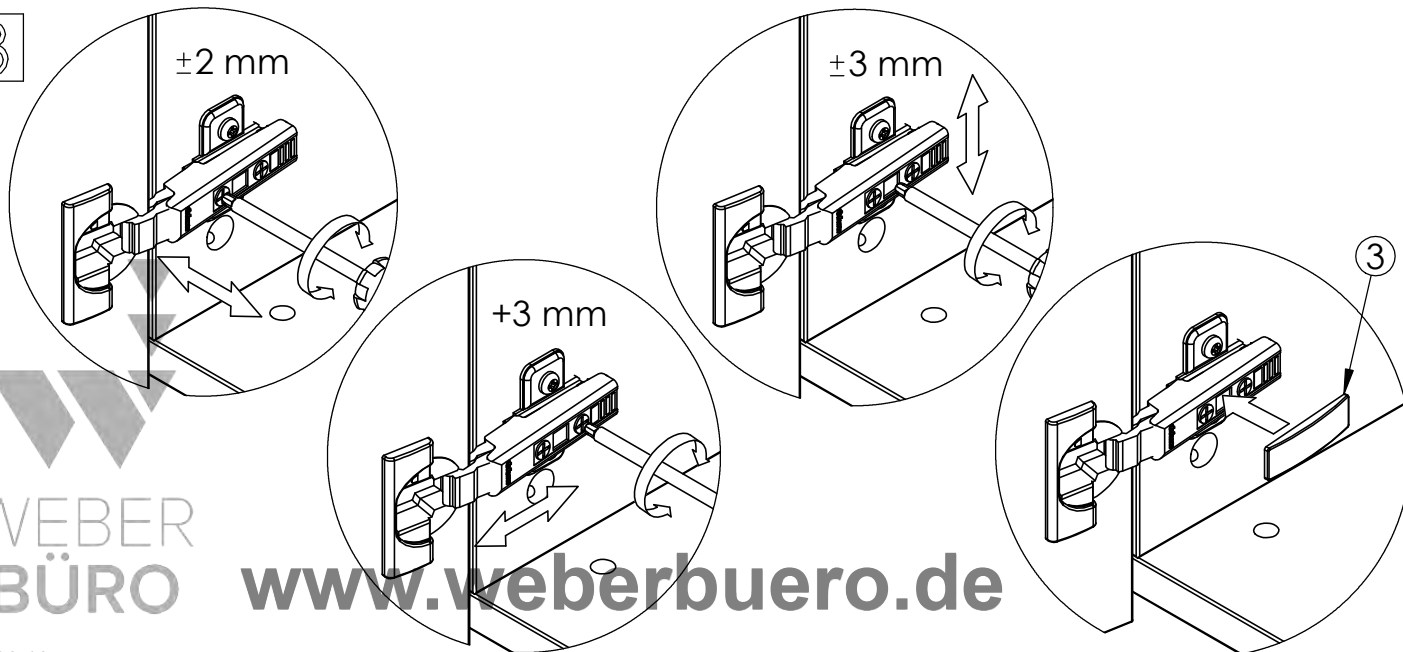

4

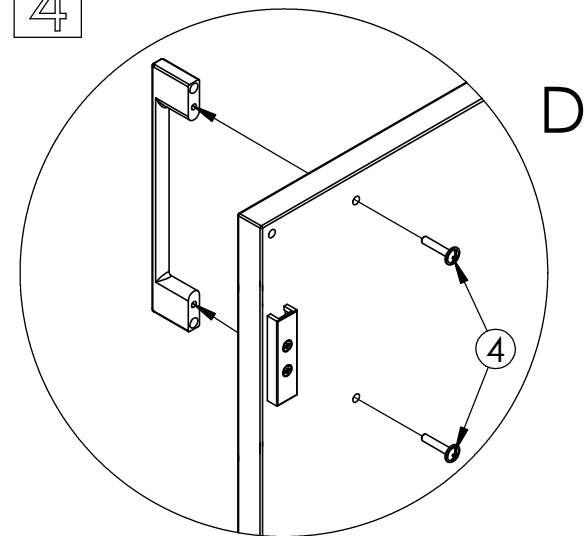

WEBER
BÜRO

www.weberbuero.de