



# M60EN313

EN Assembling scheme  
 DE Montageschema  
 FR Schéma d'assemblage

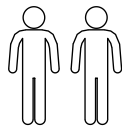


S5

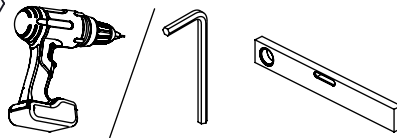



00:15

1




M42E0008 x16


a - x2

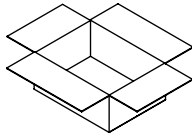


b - x2

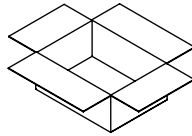

c - x1

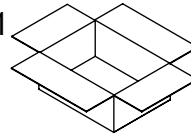


2




M6x16  
M42C0255 x16

3











∅8x30  
M42H0001 x2



4



M6x12  
M42C0043 x6

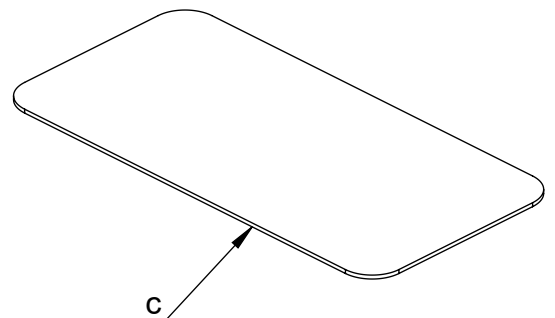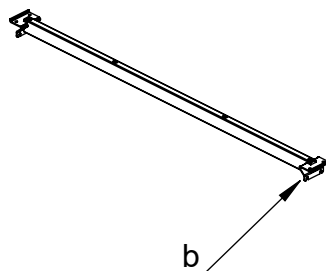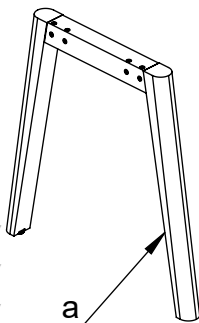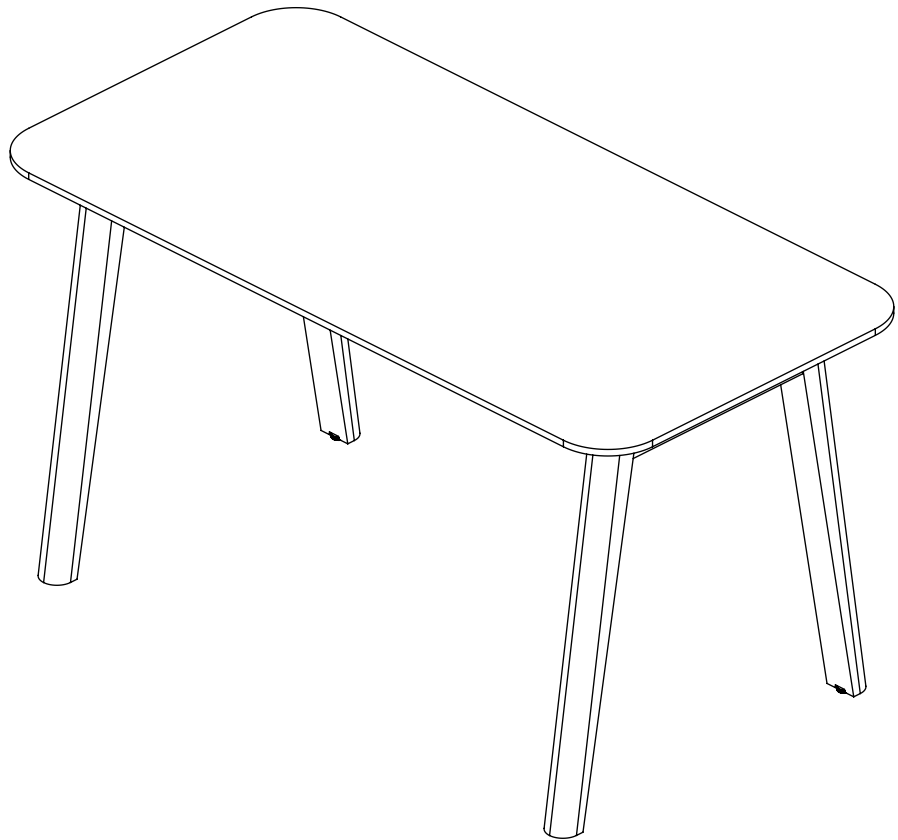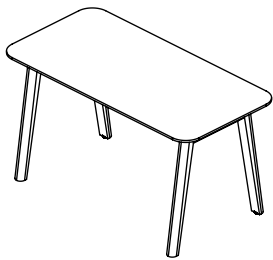
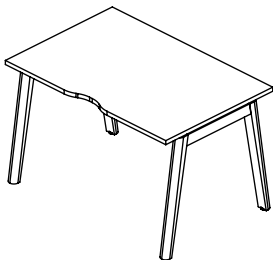
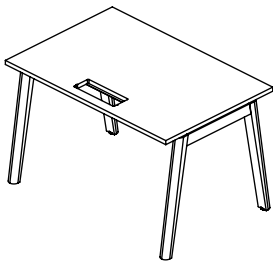
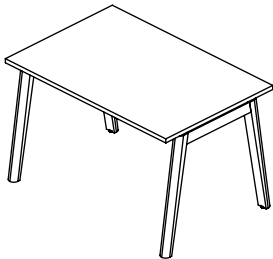


1

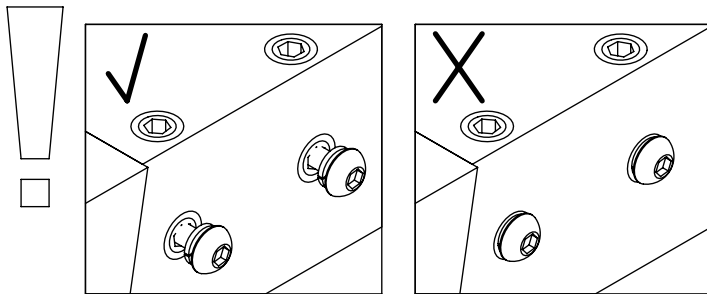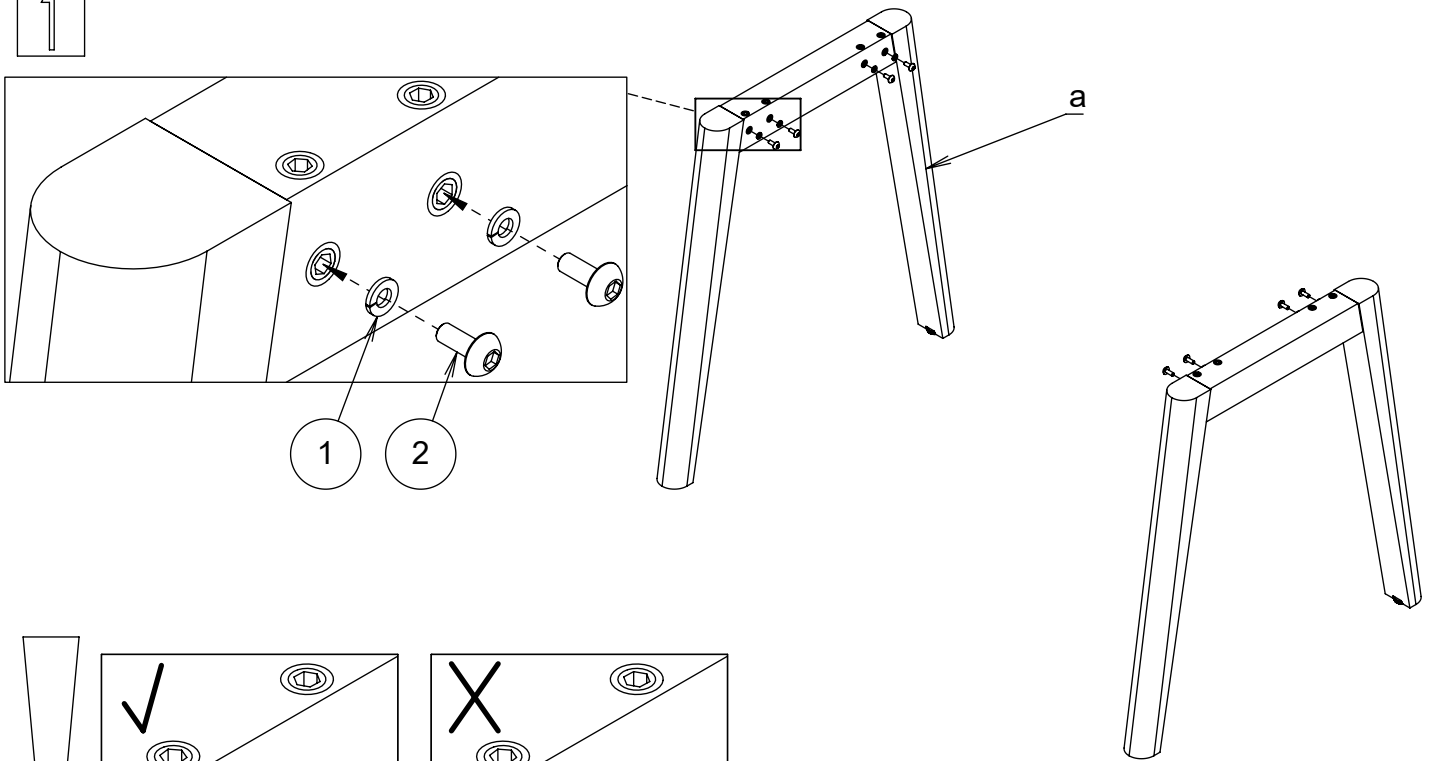





EN	Do not tighten up (yet)
DE	Schrauben noch nicht festziehen
FR	Ne pas serrer encore

2

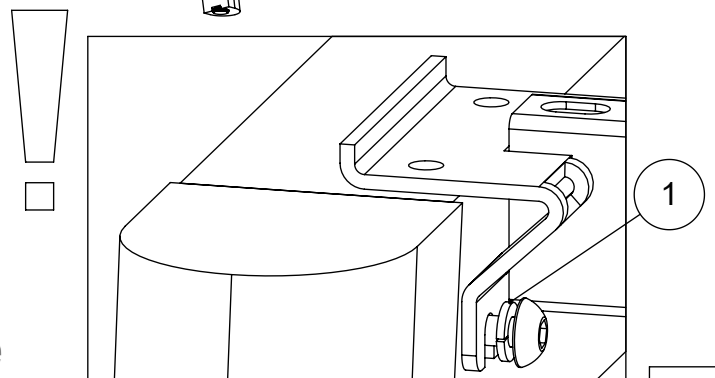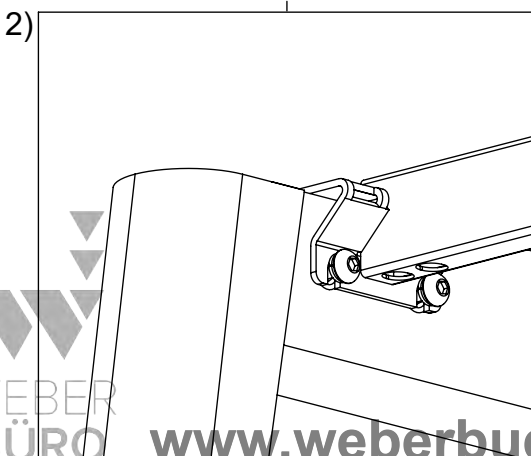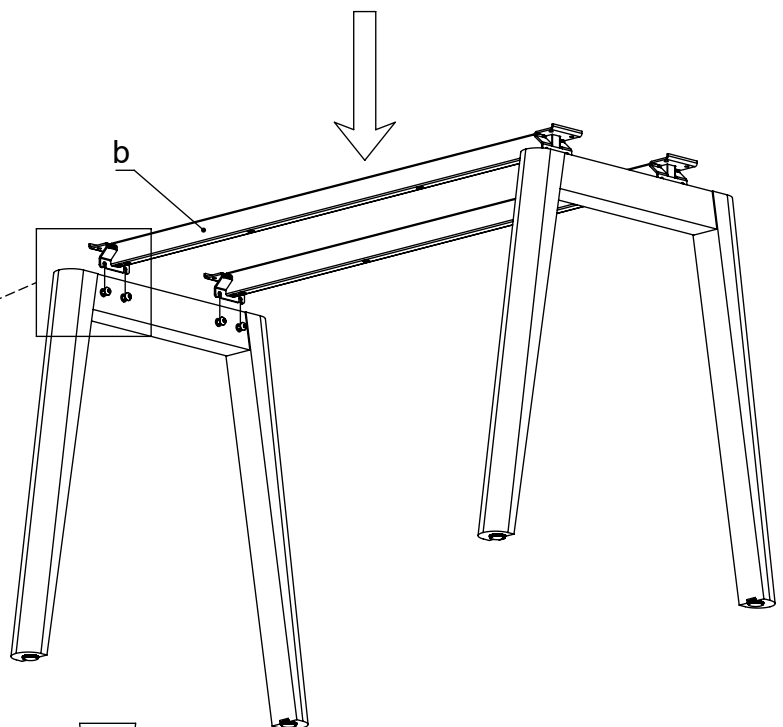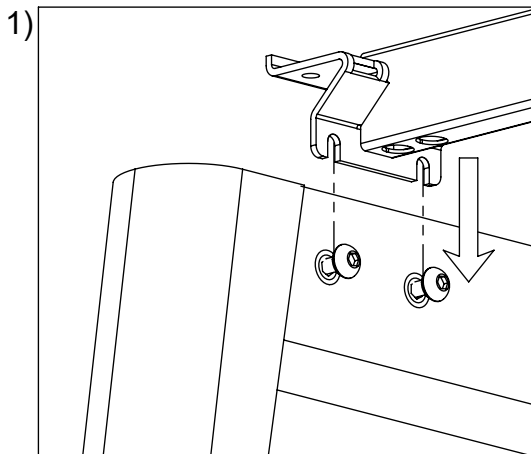




3

1 2

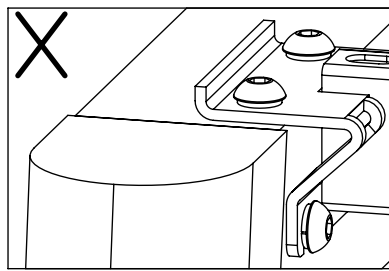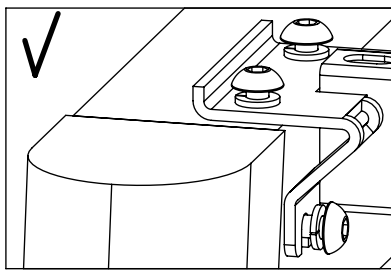
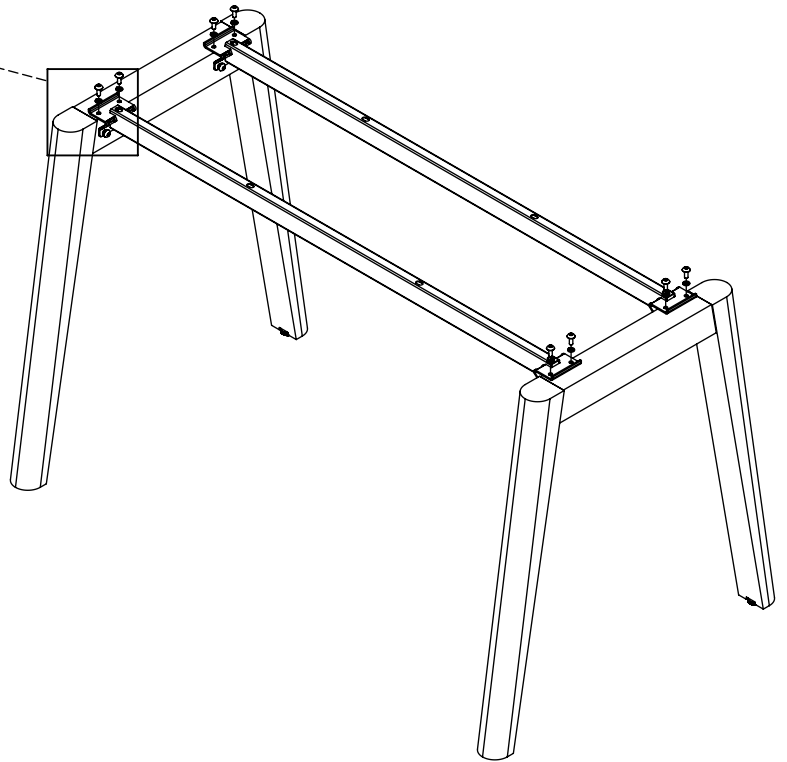
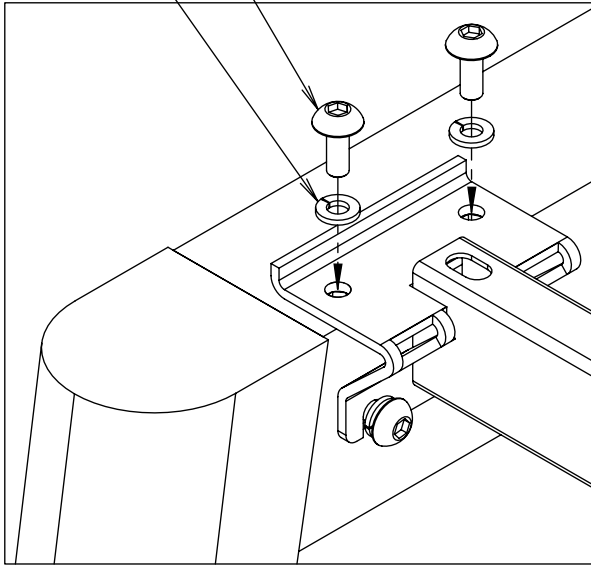


EN	Do not tighten up (yet)
DE	Schrauben noch nicht festziehen
FR	Ne pas serrer encore

4

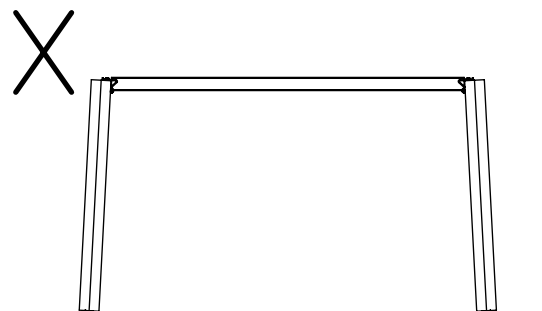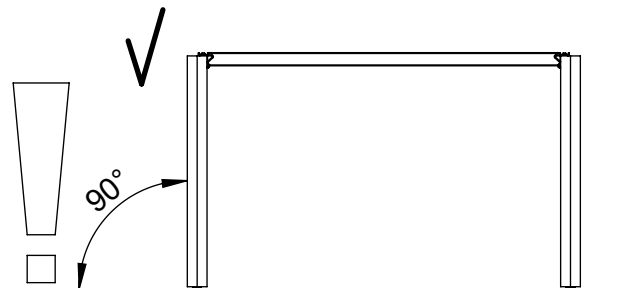
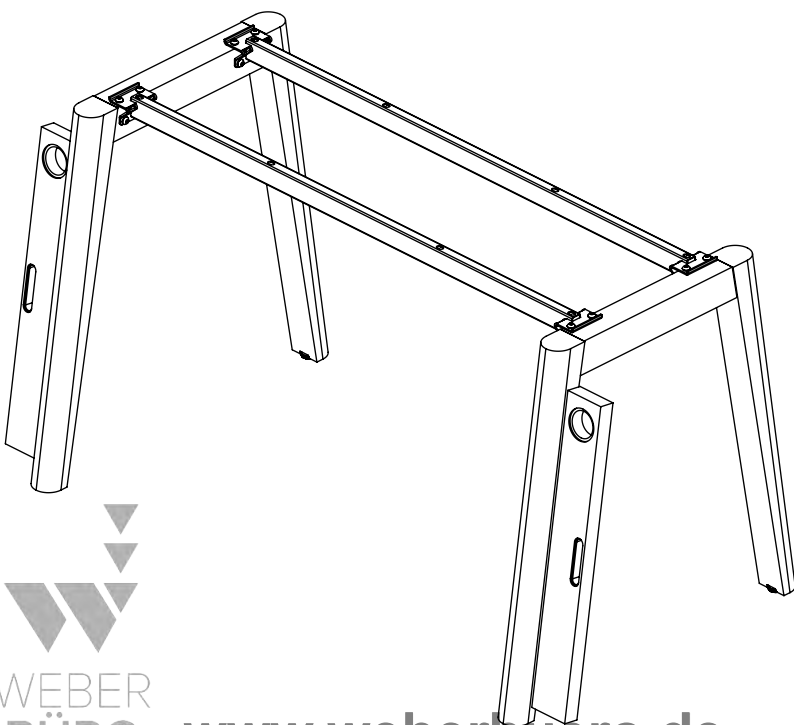


5

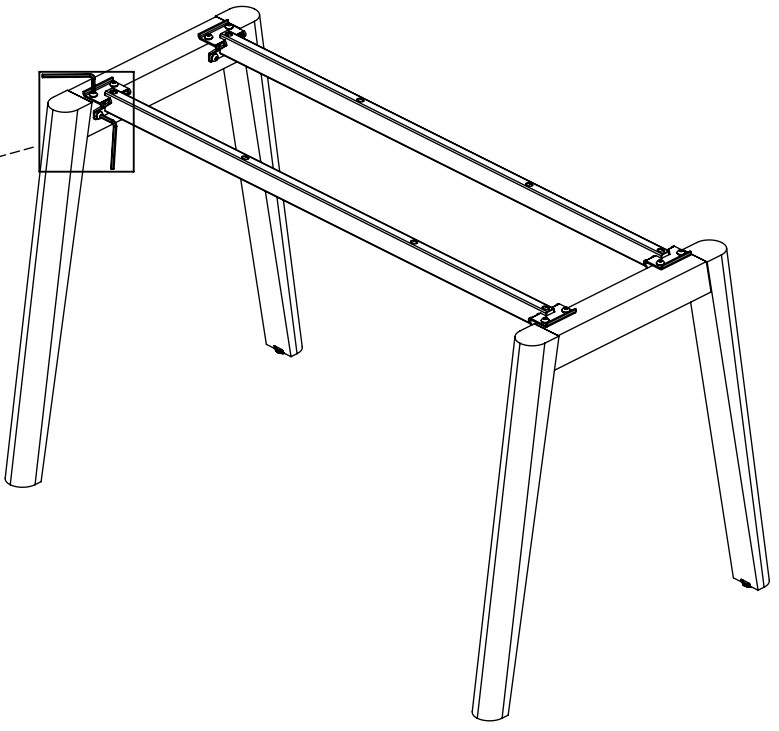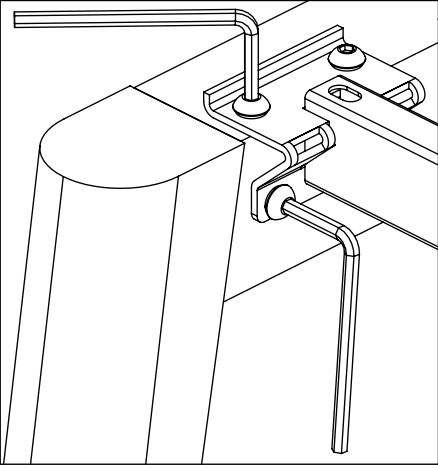
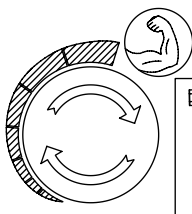


EN Tighten up!  
DE Festziehen einer Schrauben!  
FR Serrer une vis!




6

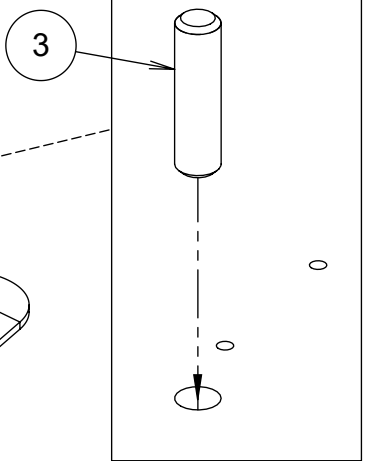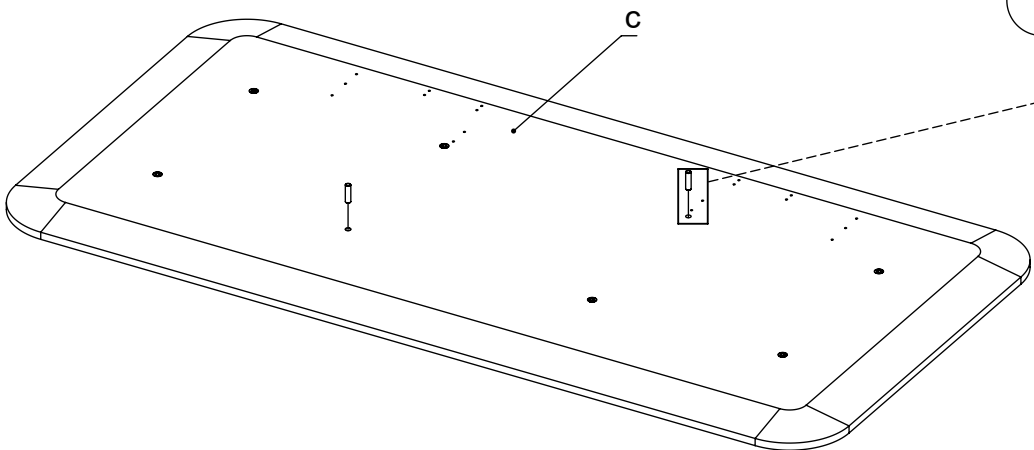

7

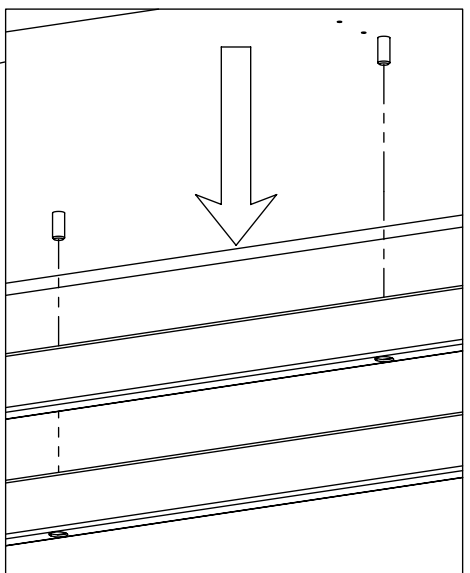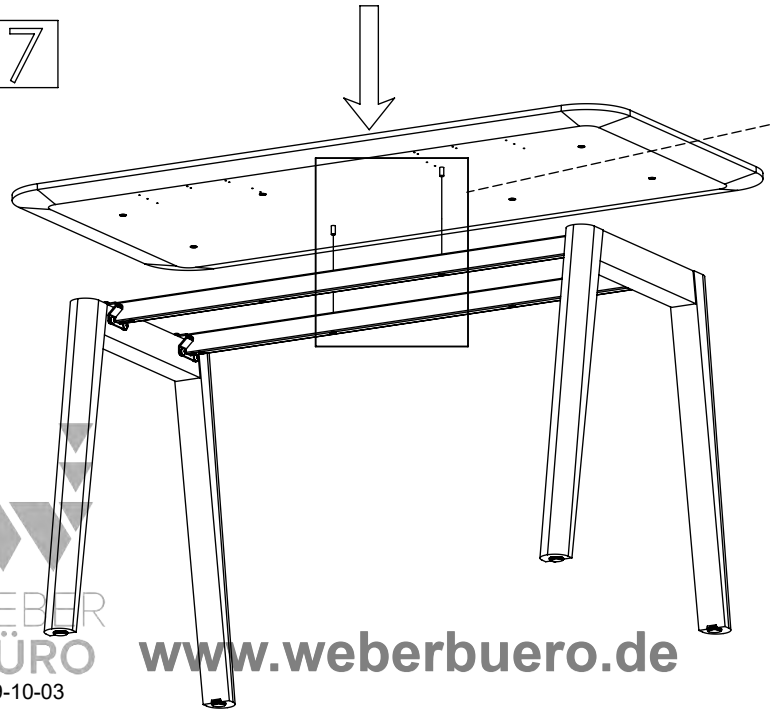

8

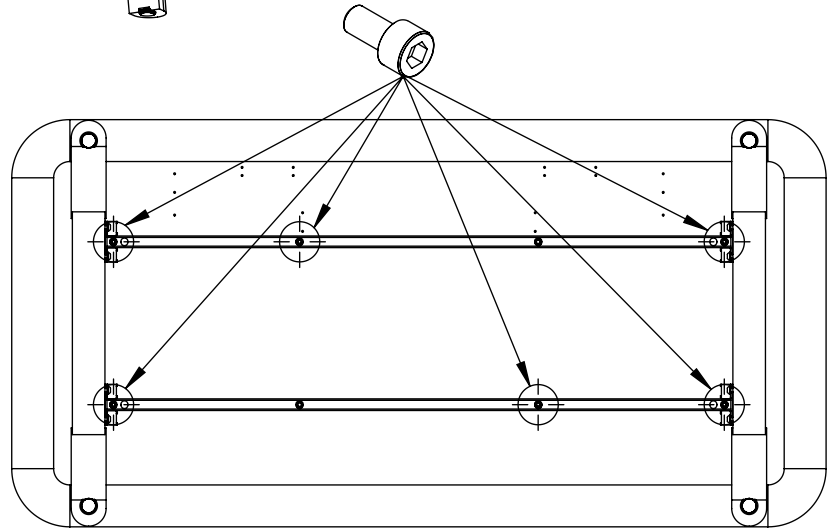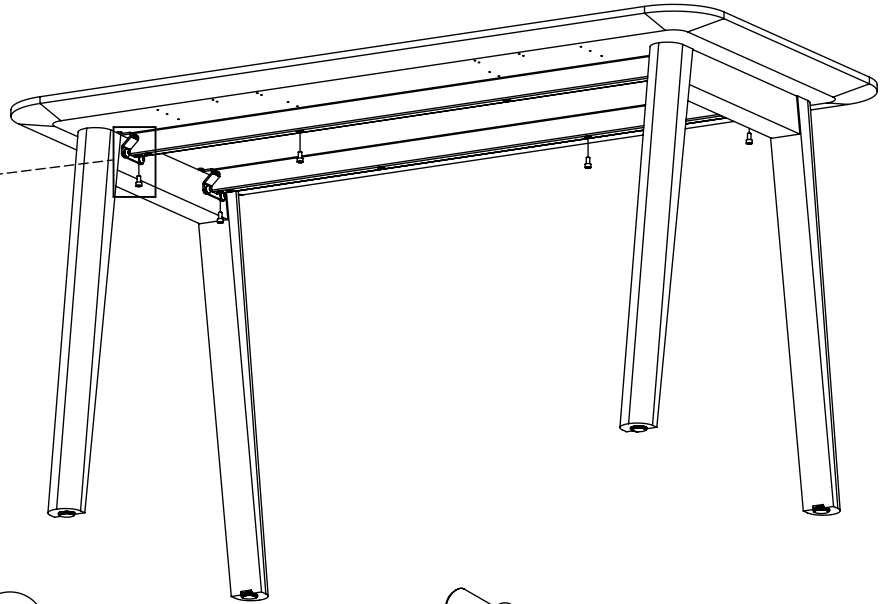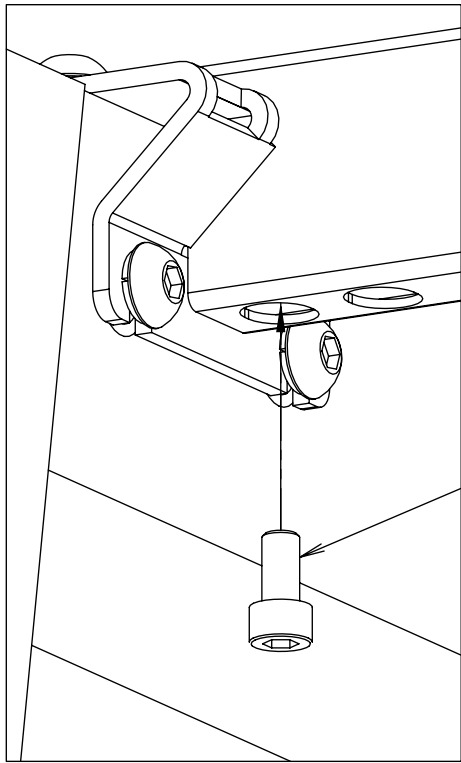

9

