




M60EF002 1 / 1

Assembling scheme


Required tools:

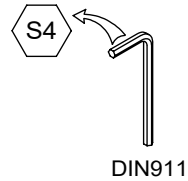

Hardware:

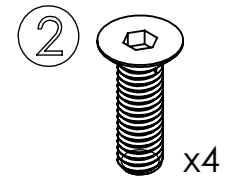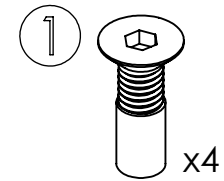


1

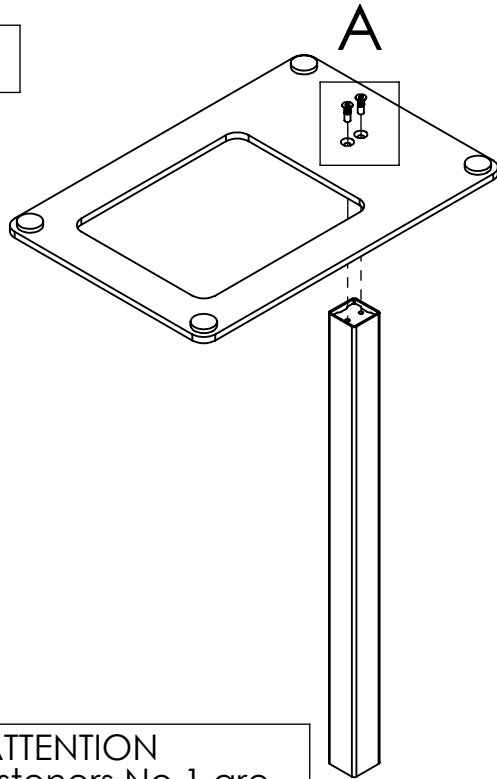


!-ATTENTION
Fasteners No.1
are with glue. Tight it up
to the end!

A

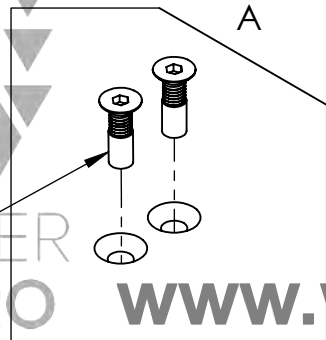


2

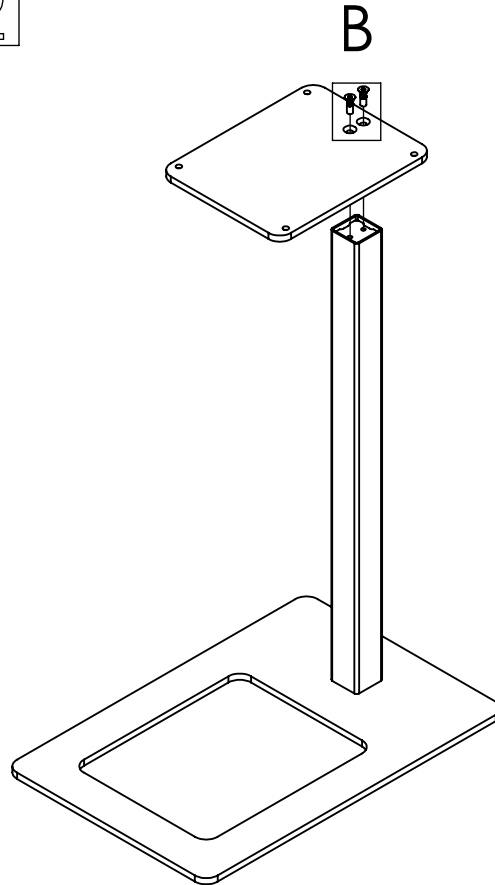


!-ATTENTION
Fasteners No.1 are
with glue. Tight it up
to the end!


B

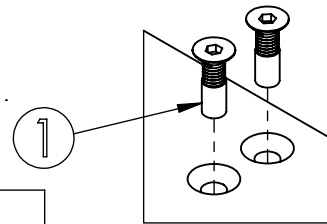

3

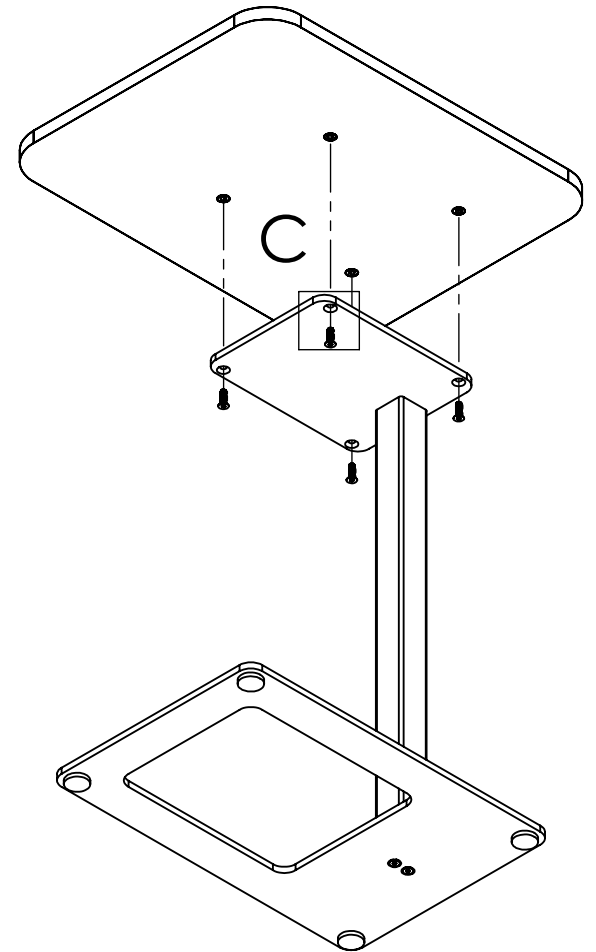

C

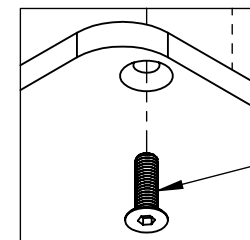

WEBER
BÜRO

www.weberbuero.de