

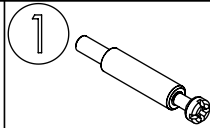



# M60EX001

EN Assembling scheme  
 DE Aufbauanleitung  
 FR Schéma d'assemblage


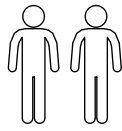


5/11x34  
M42B0022 x8

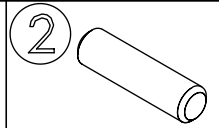


∅8x30  
M42H0001 x8


a - x1    d - x1  
 b - x1    e - x1  
 c - x1

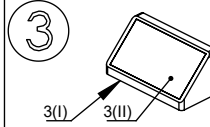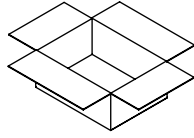


M45A9016 x2

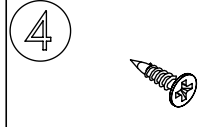



3.5x15  
M42A0012 x8

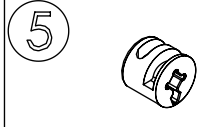







15/18  
M42B0001 x8




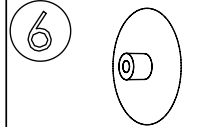


∅4/18  
M45A30\* x8

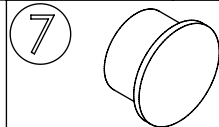



M45A20\* x4

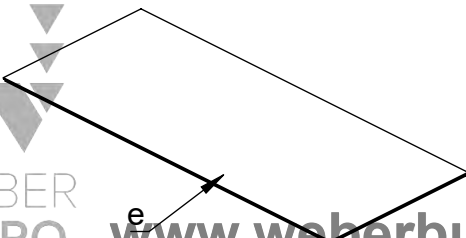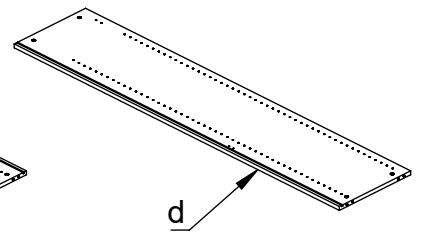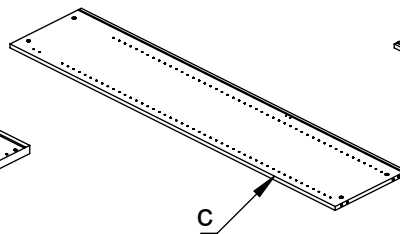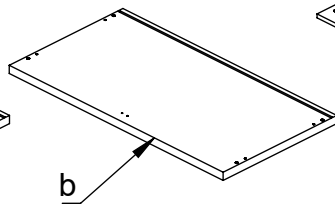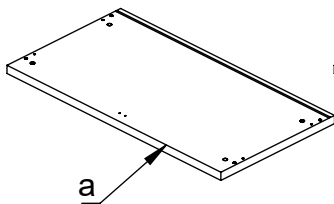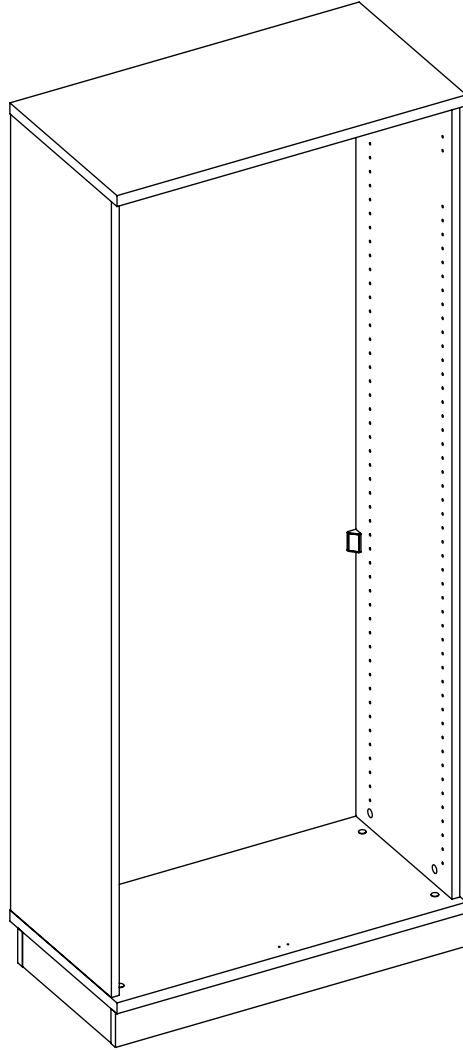


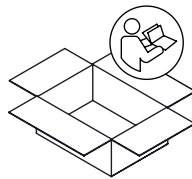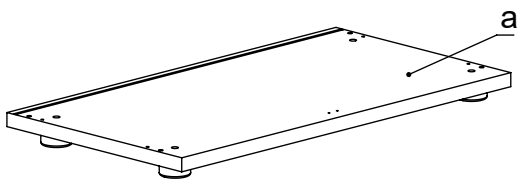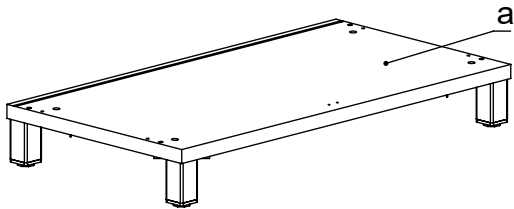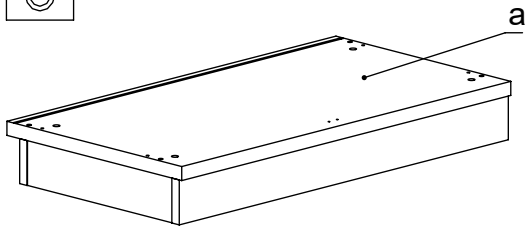


EN	The assembly scheme of base is included in the selected base package
DE	Die Aufbauanleitung zur Befestigung der Möbelbeine ist im entsprechenden Paket
FR	La fiche de montage de la base est incluse dans le colis de la base choisie

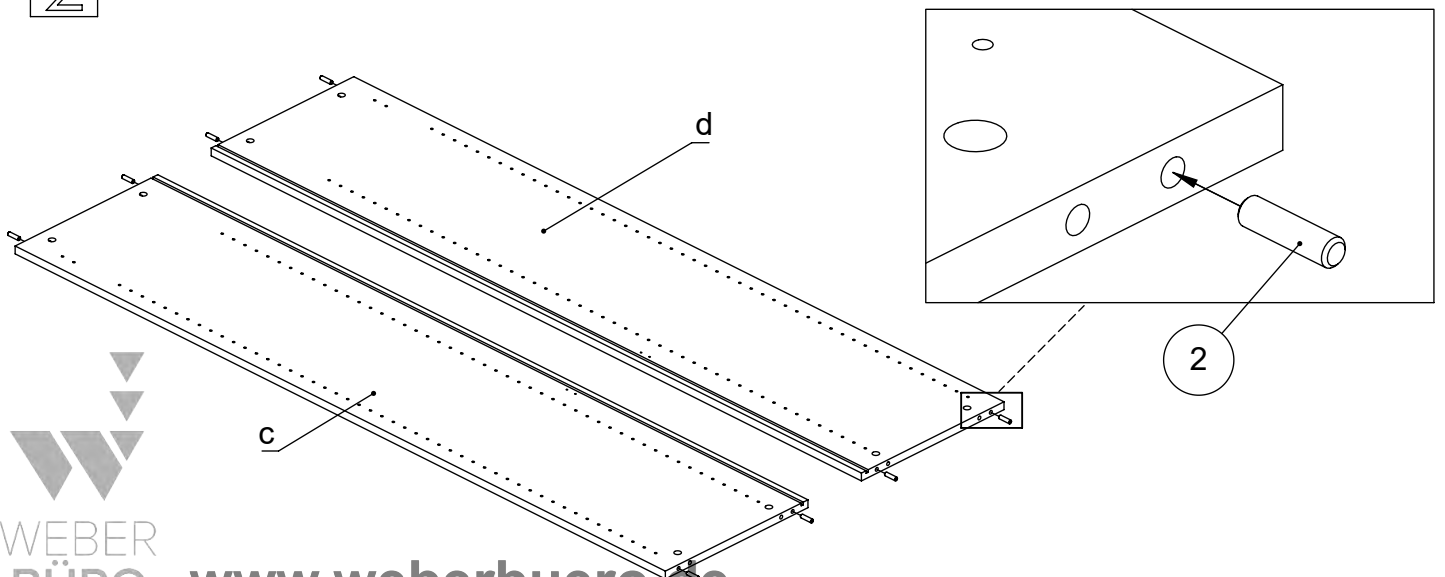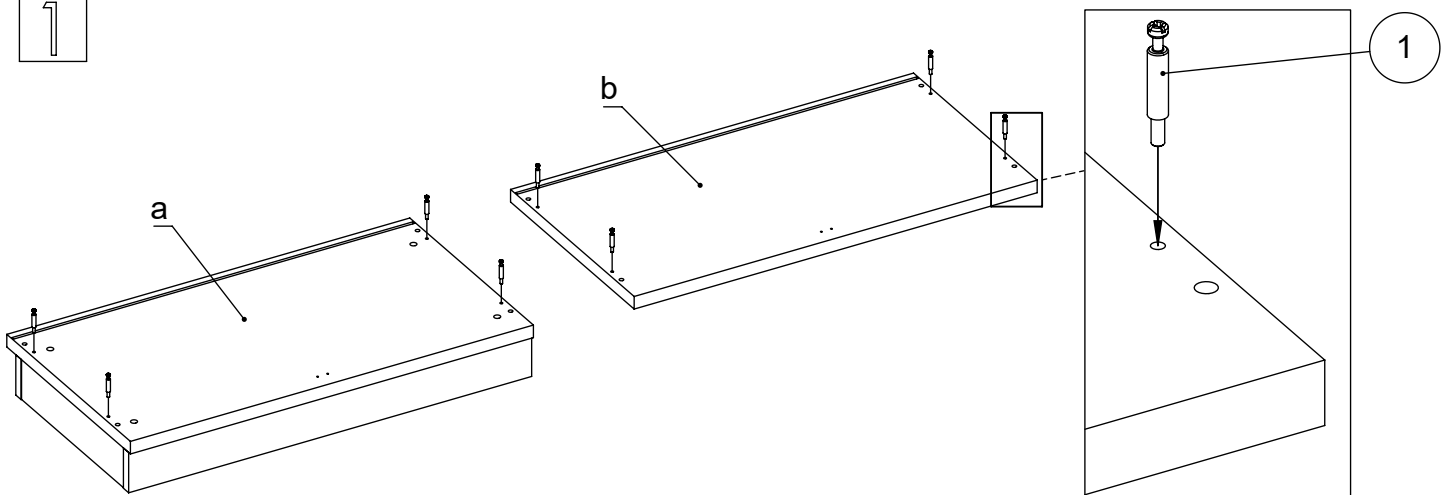




3

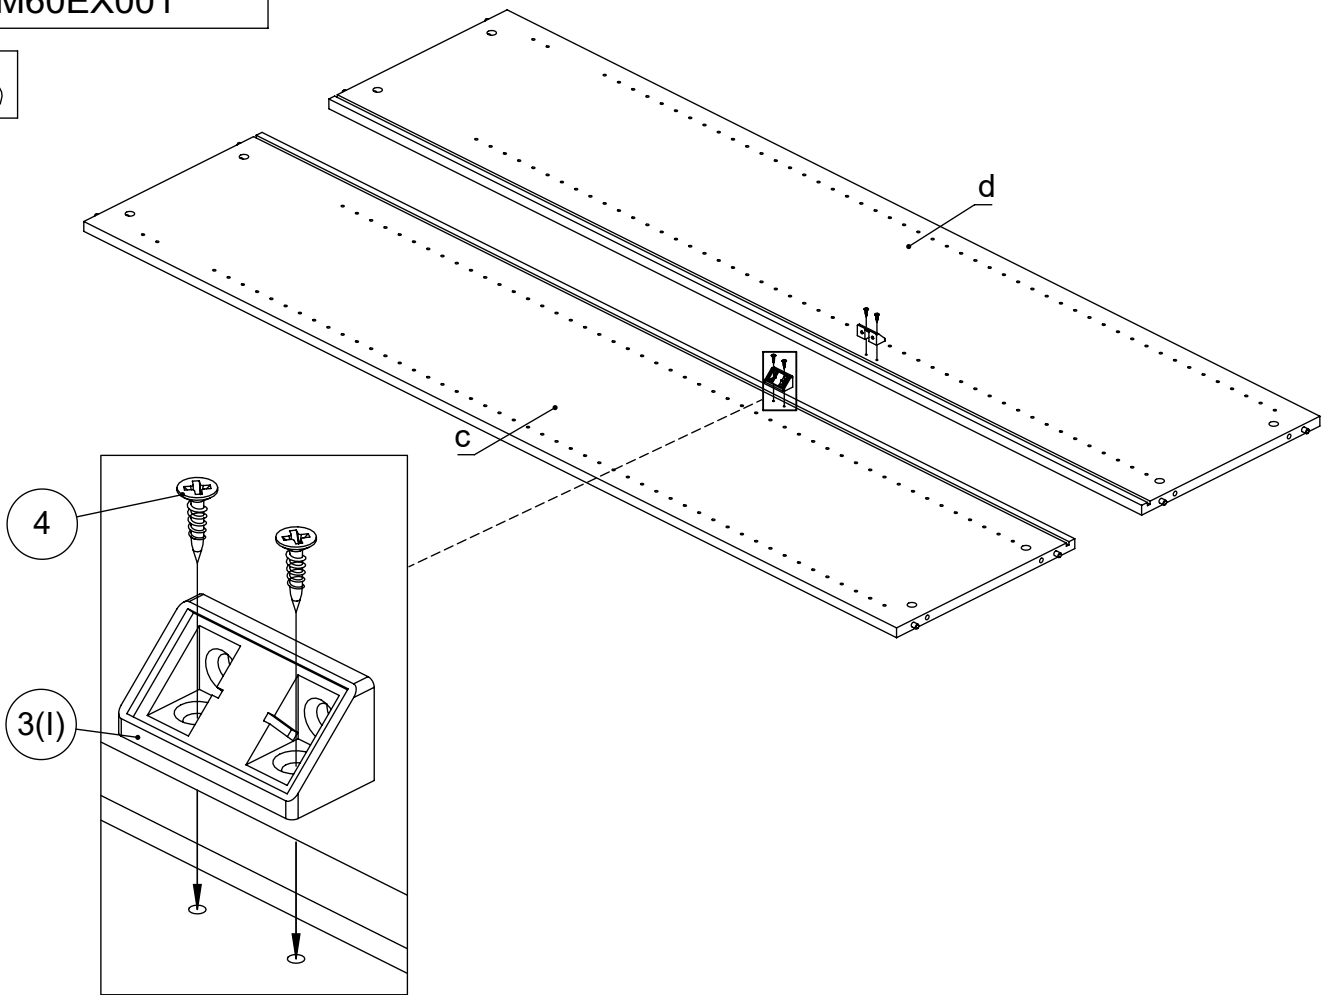



4

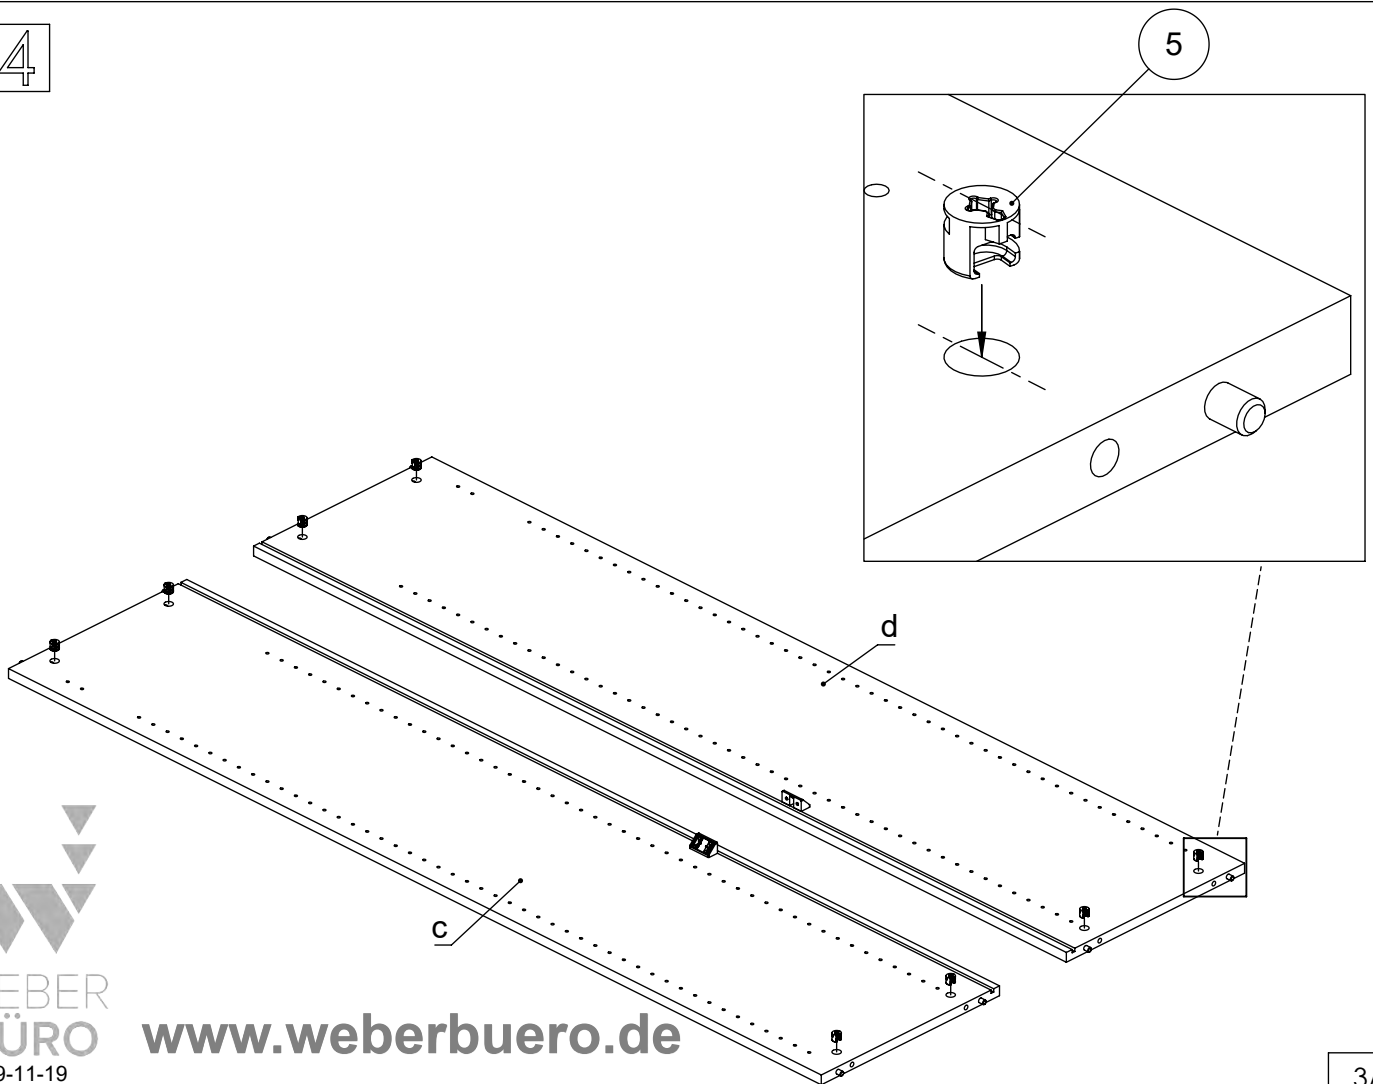


5

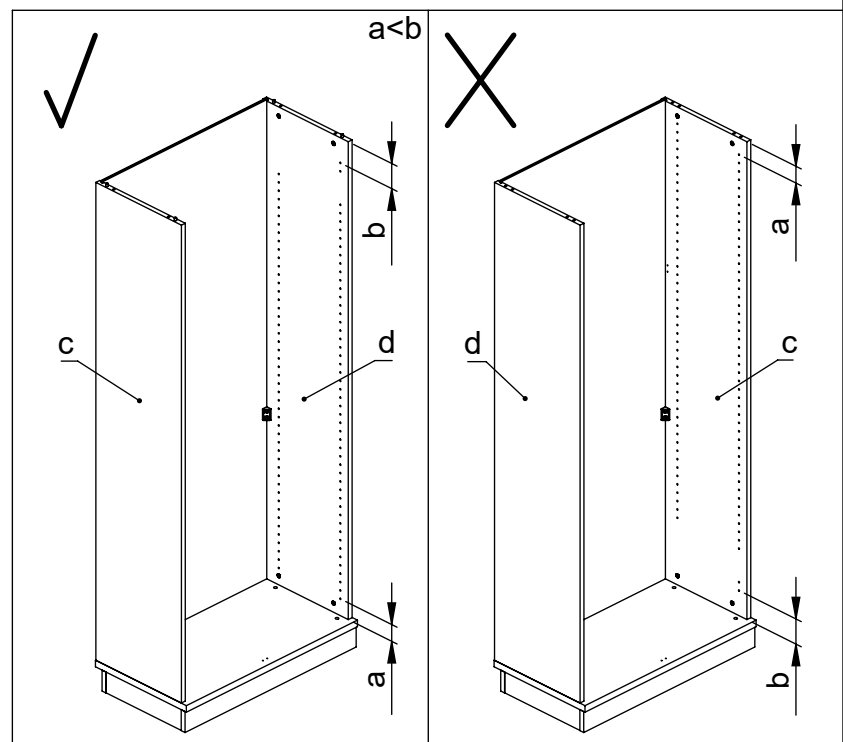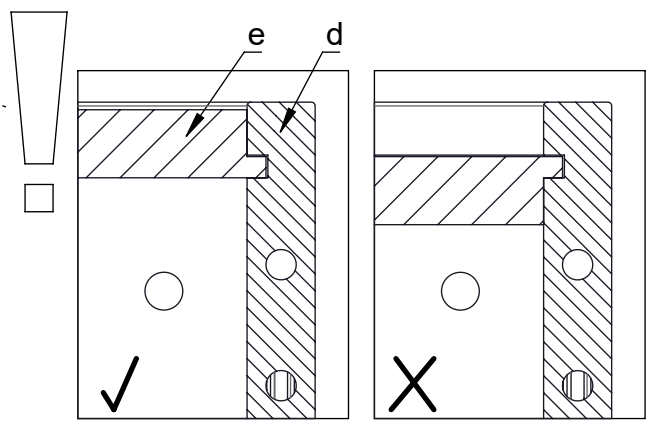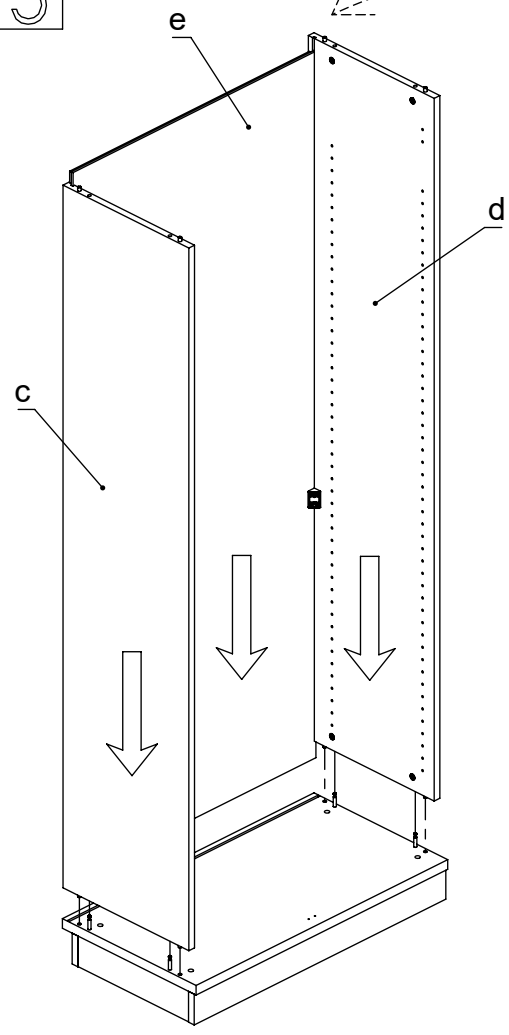


6

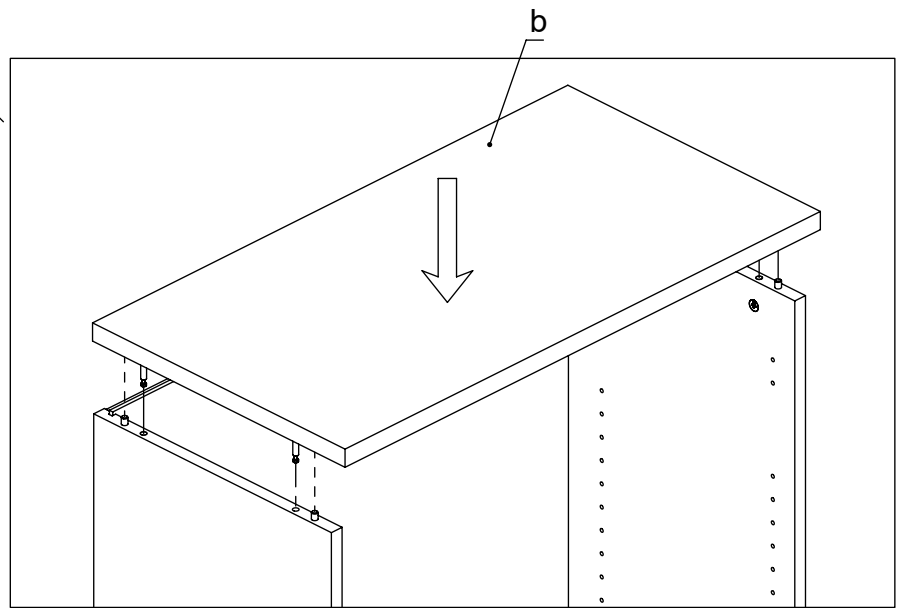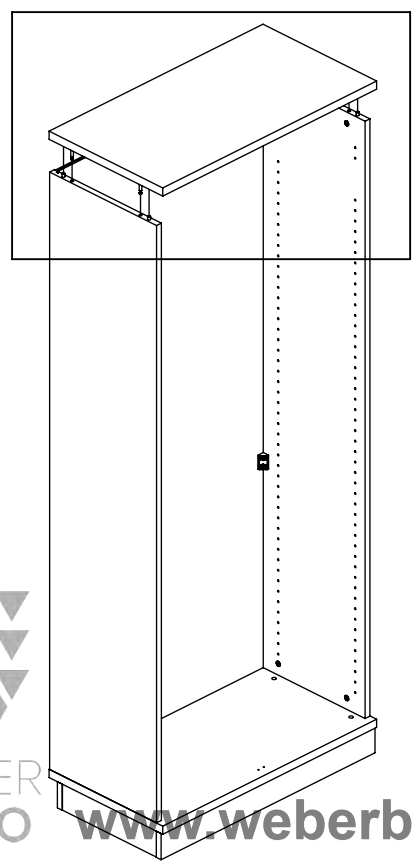


7

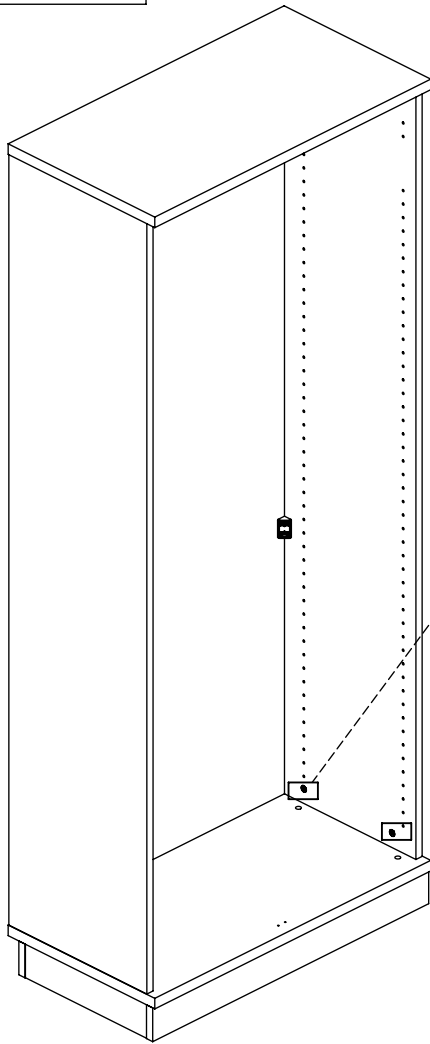


1)

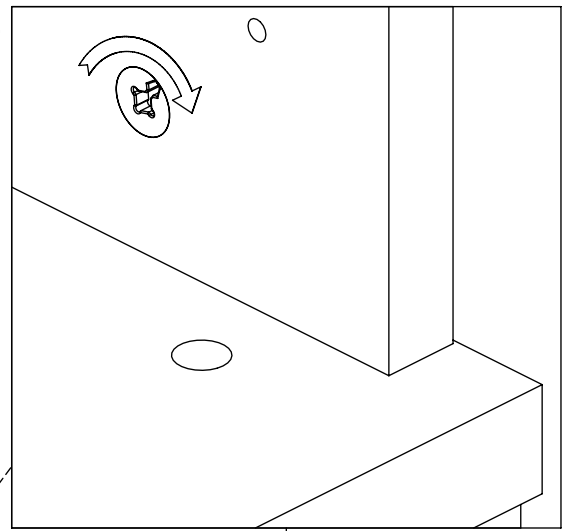


2)

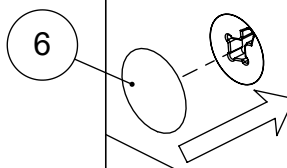


8

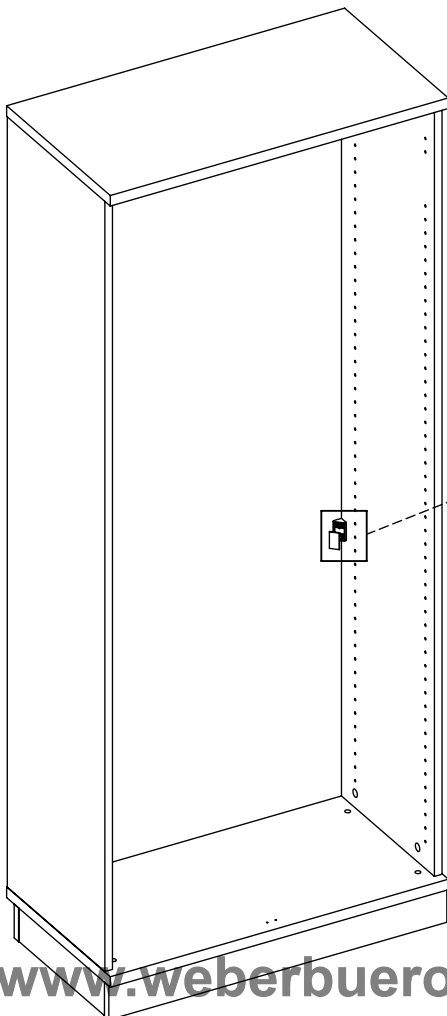

1)

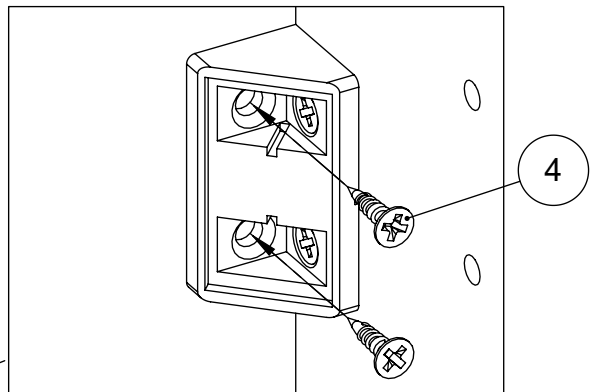


2)

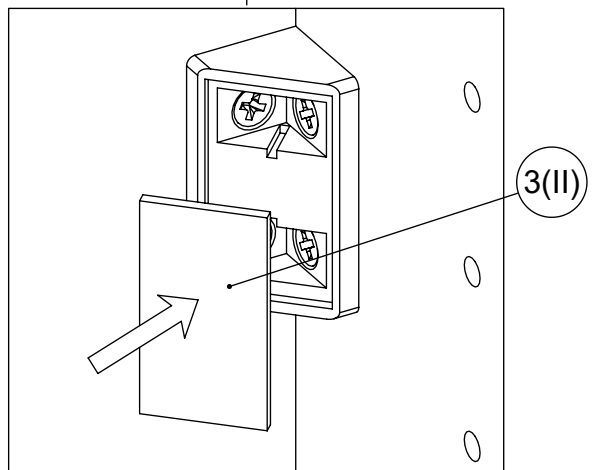


9


a)

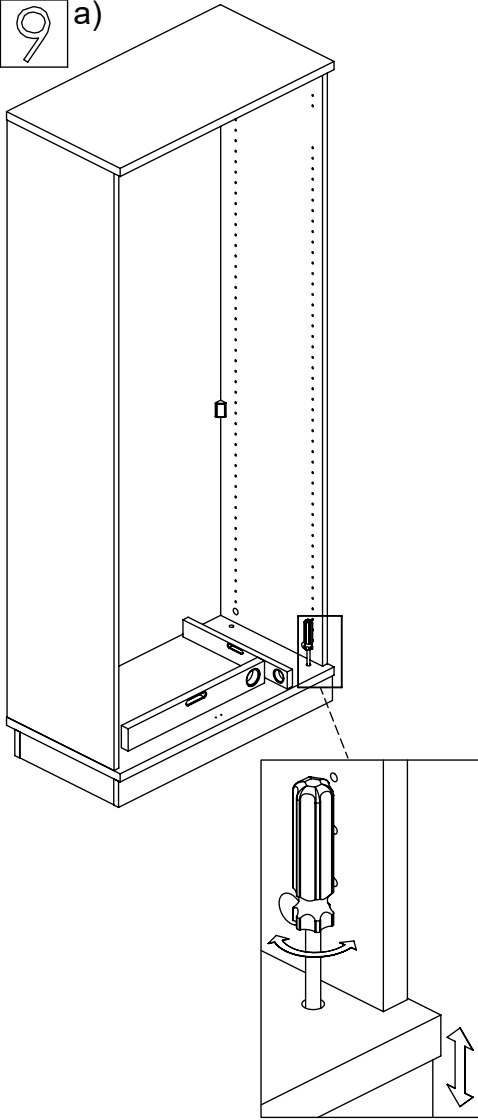


b)

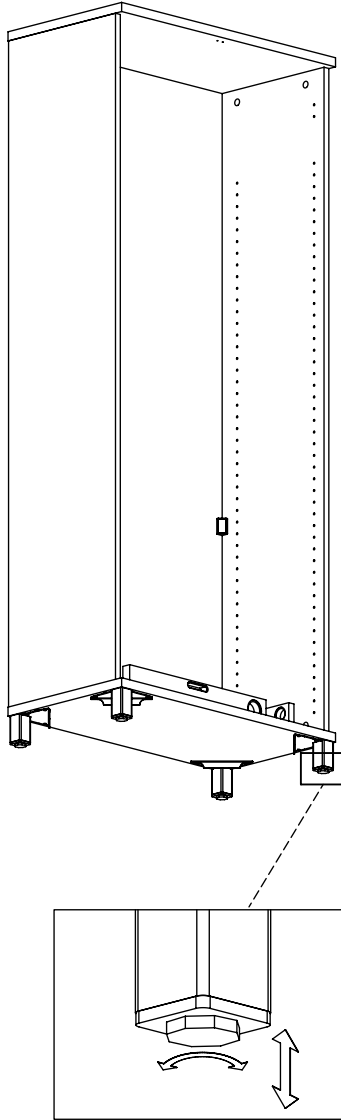


c)

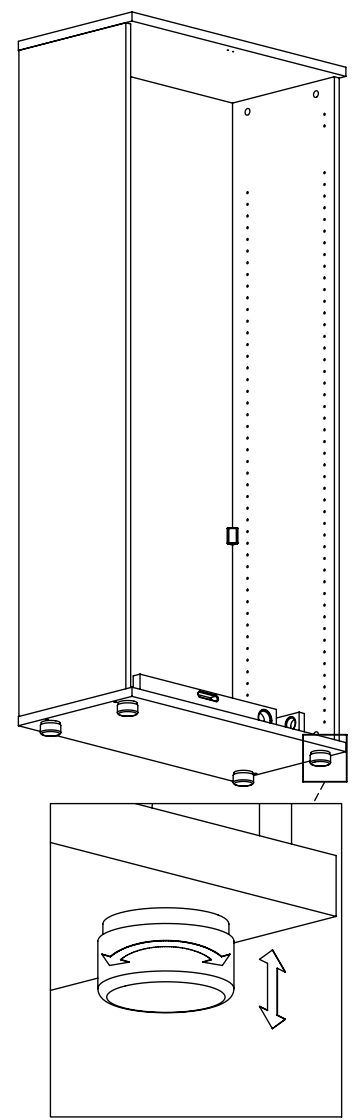

10

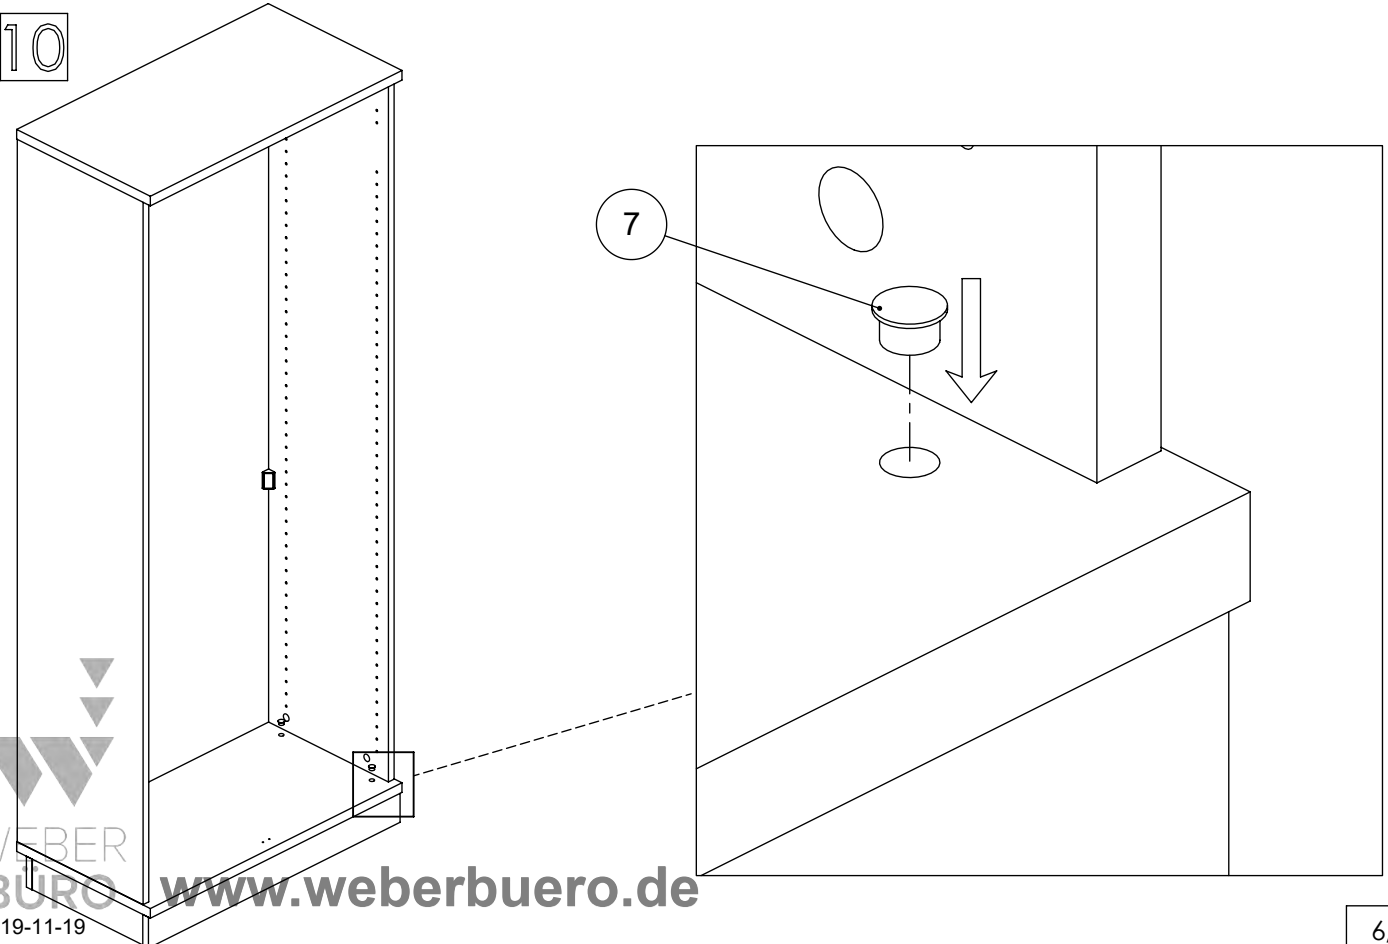




Surinkimo schema:  
 Assembling scheme:  
 Схема сборки:



①	x4	x12	x16	x8
	G1C002			
	G1C005			
	G1C008	G1C009	G1C015	G1C014
	G1C037	G1C006	G1C011	G1C013
	G1C038	G1C001		G1C039

1.

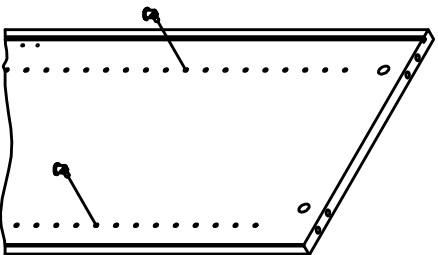

M60EX009





2.

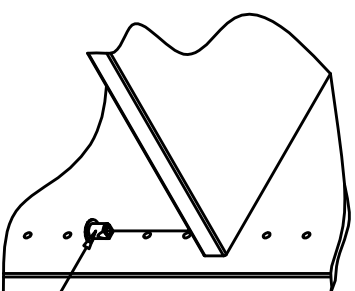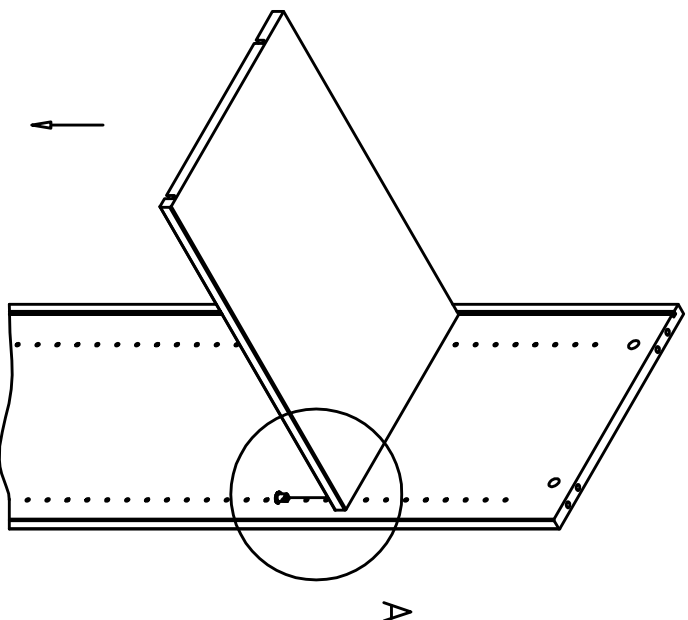

A (2:1)



# M60EX014

EN Assembling scheme  
 DE Aufbauanleitung  
 FR Schéma d'assemblage

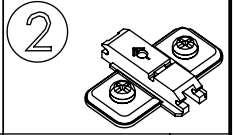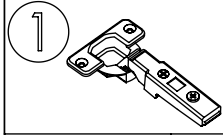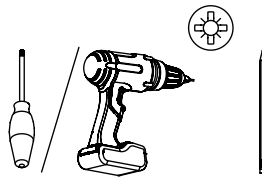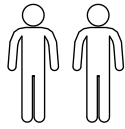



M48A0189 x8

M48A0031 x8

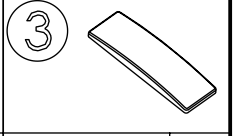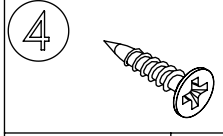



3.5x17  
M42A0017 x16

M48A0133 x8

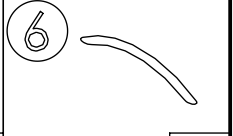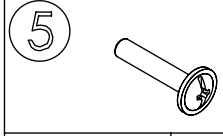



M4x22  
M42C0009 x4

x2

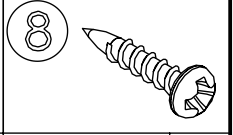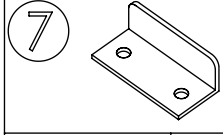

M45F4001 x2





3.0x15 P  
M42A0004 x4

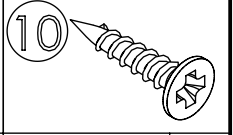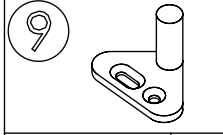

M45F9009 x2

3.0x15 K  
M42A0003 x4

a - x1  
 b - x1

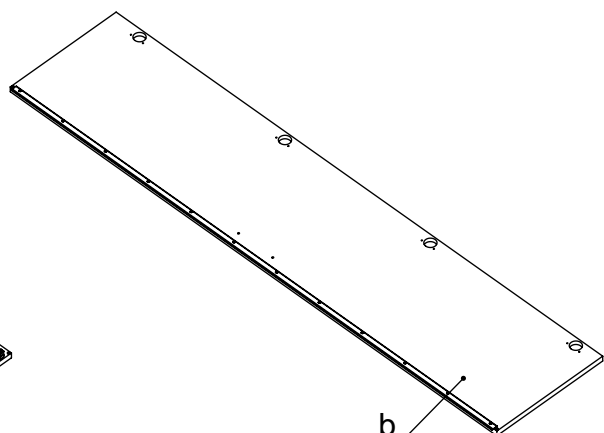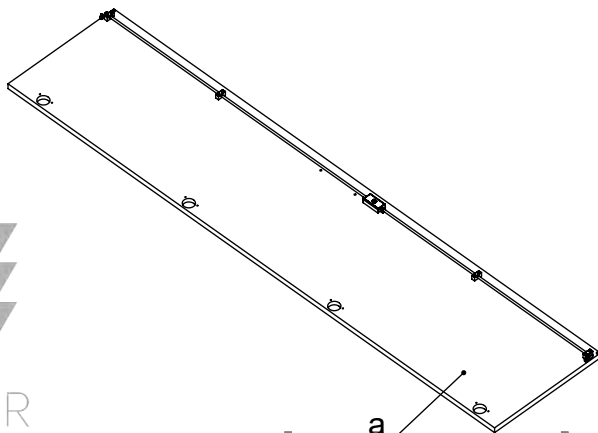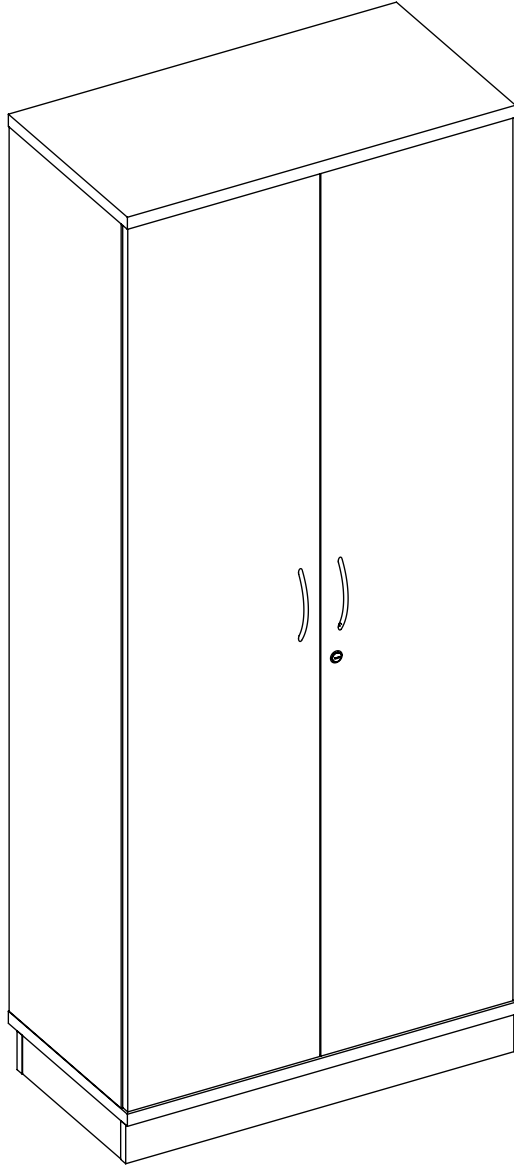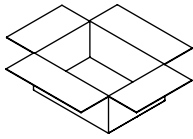



WEBER  
 BÜRO

www.weberbuero.de



2019-12-17




1

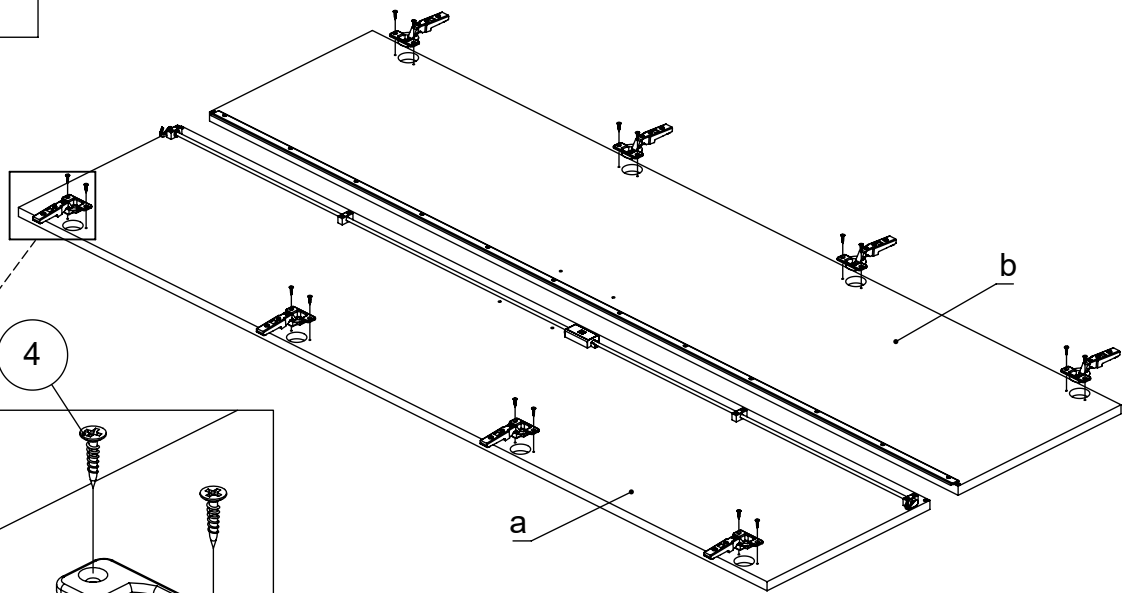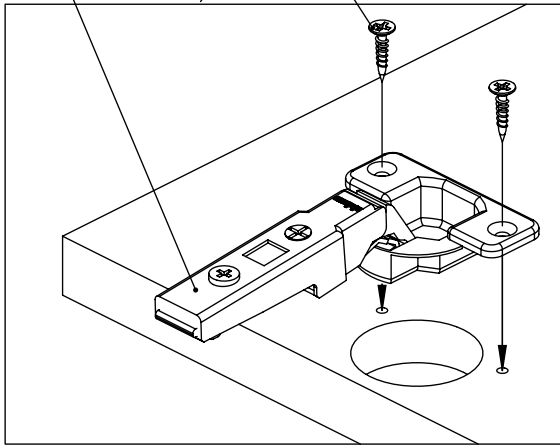


2

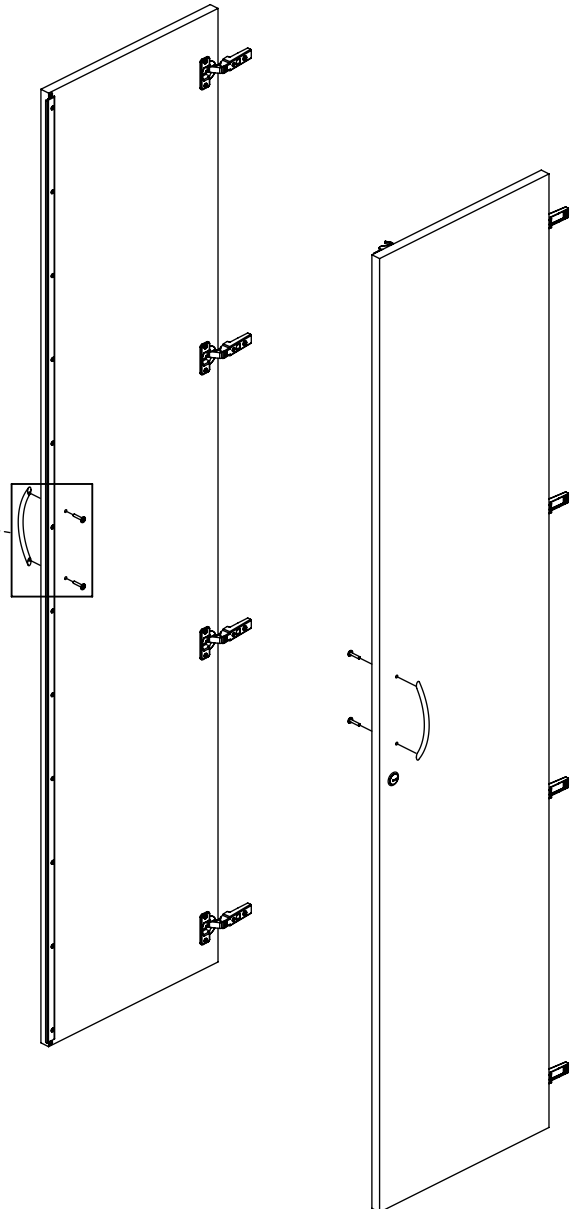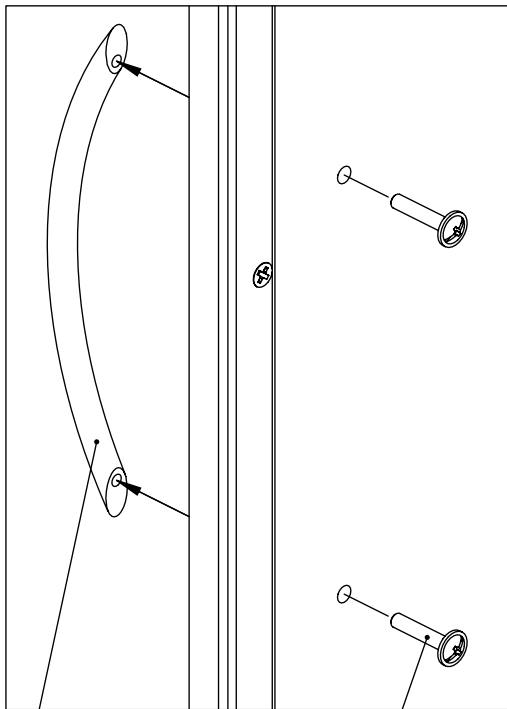


3

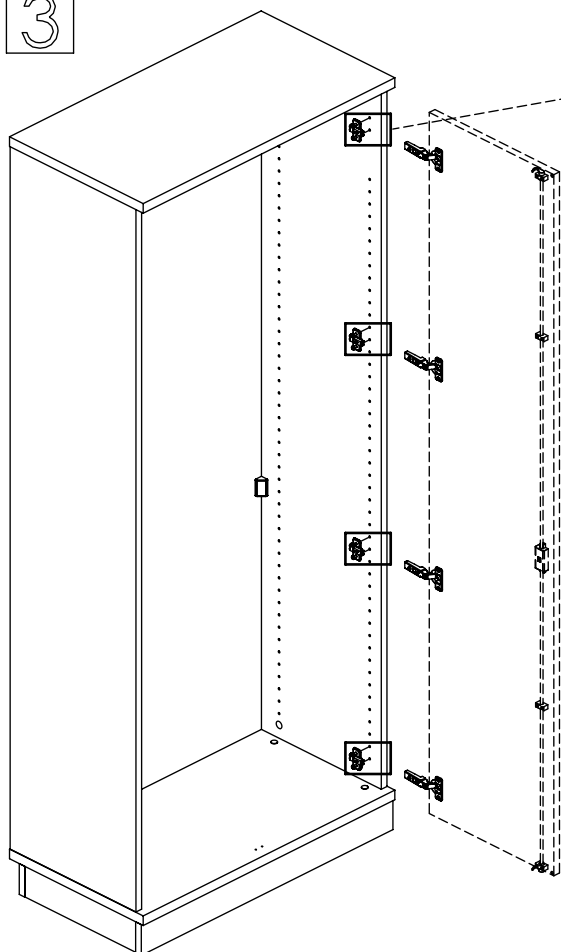

1)

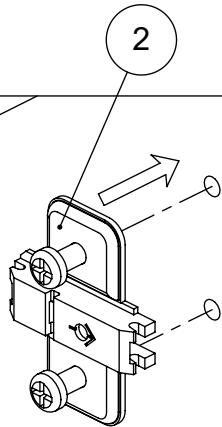


2)

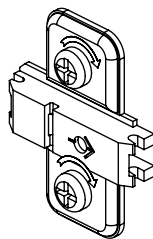


544mm  
21.4"

544mm  
21.4"


4

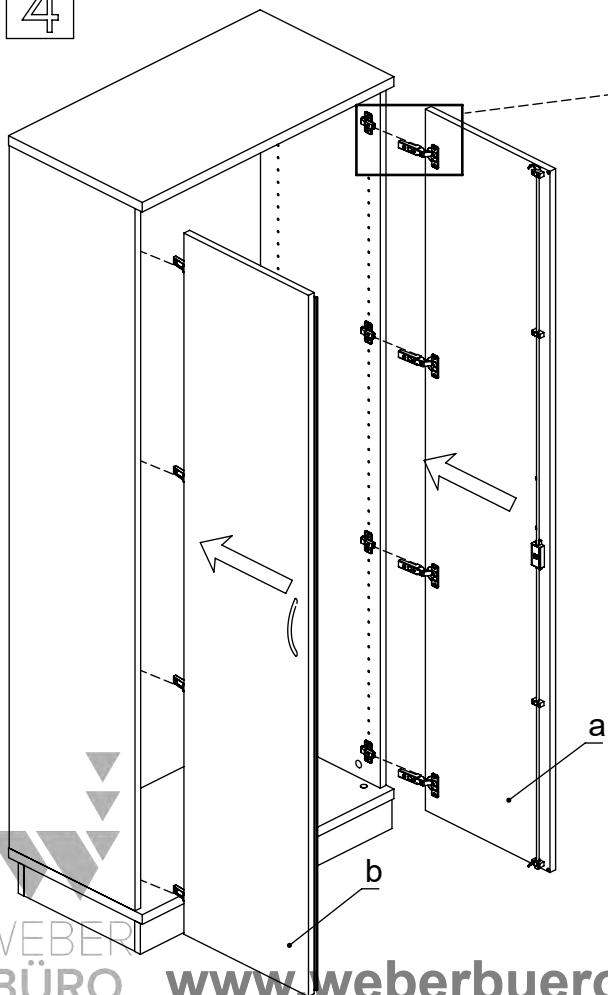


1)

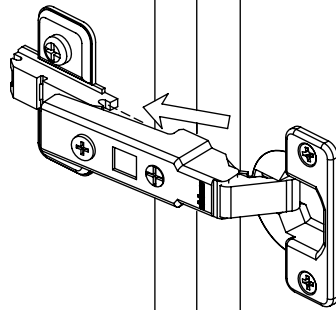


2)

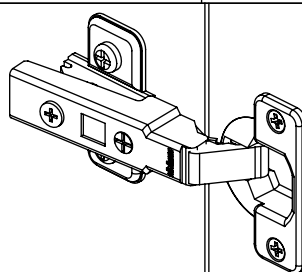


3)

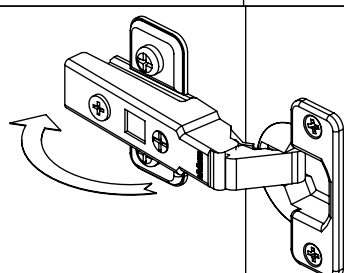


5

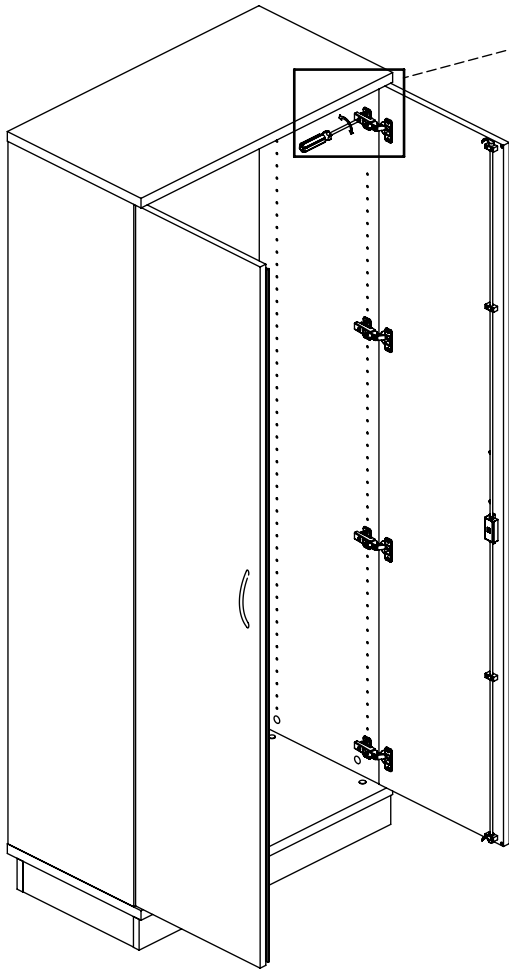

1)

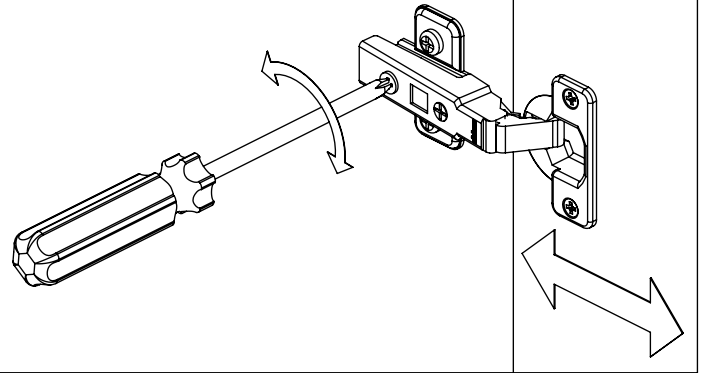


2)

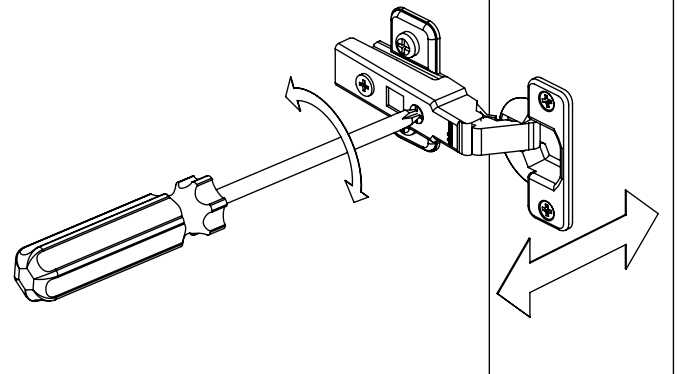


3)

3

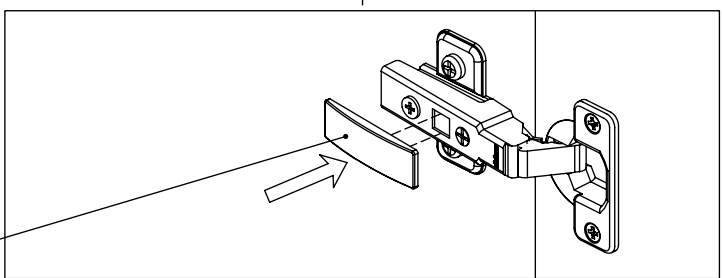


6

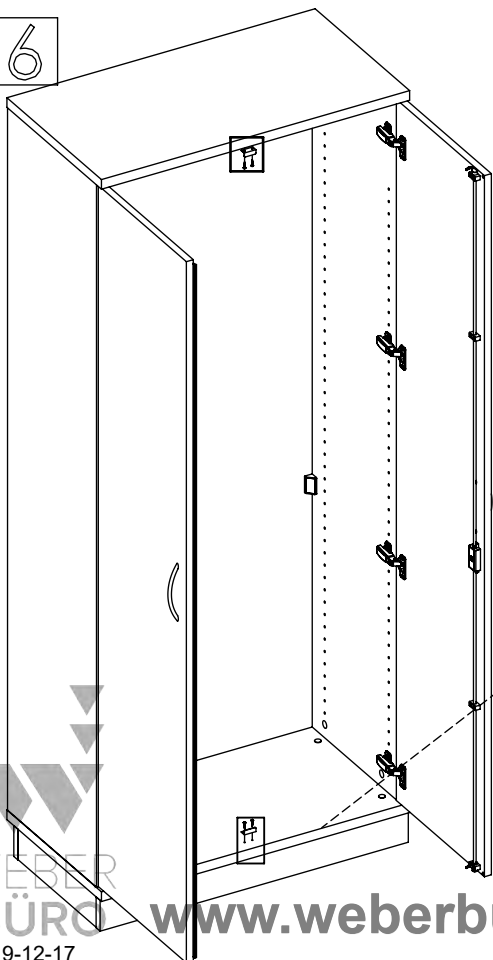


8


7

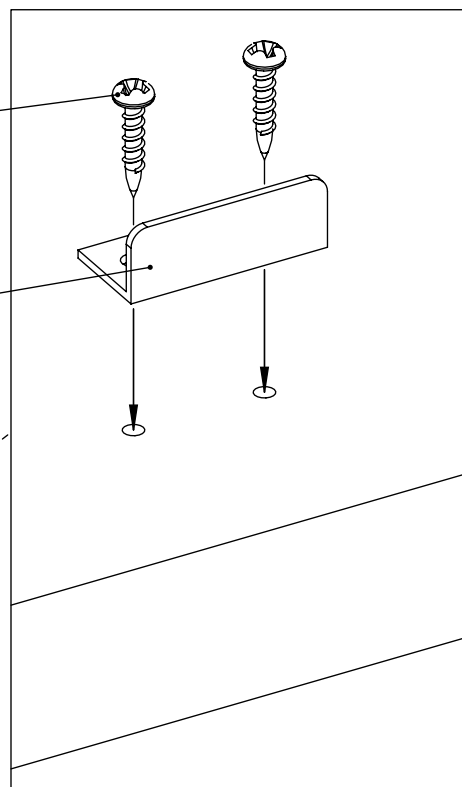




7

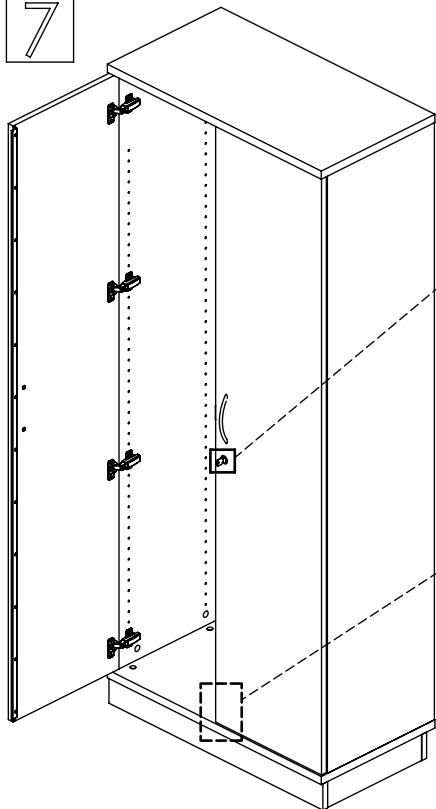


1)

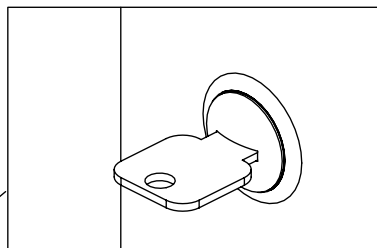

2)

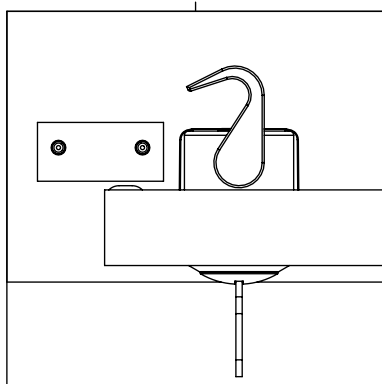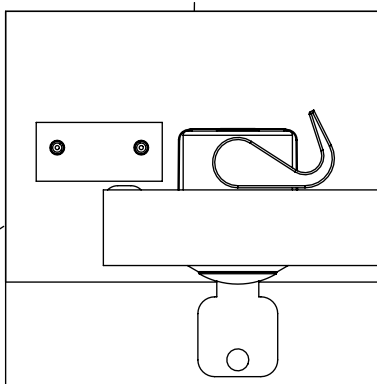
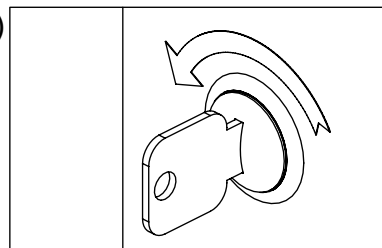


8

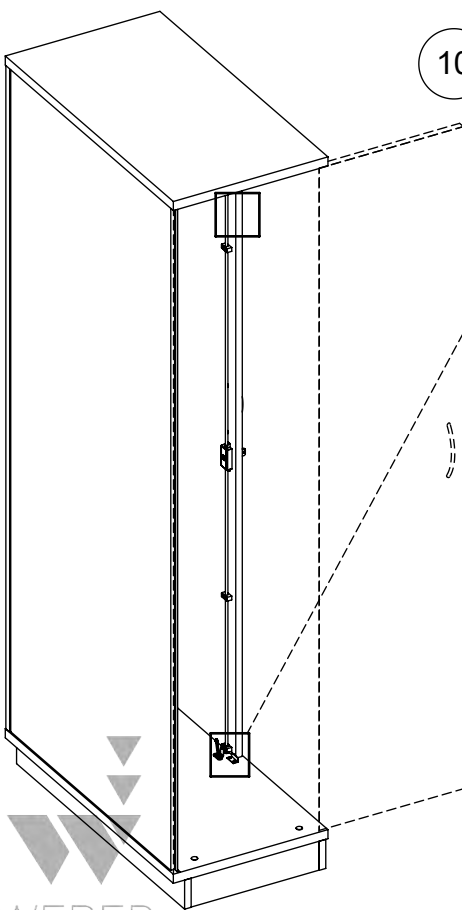

1)

10

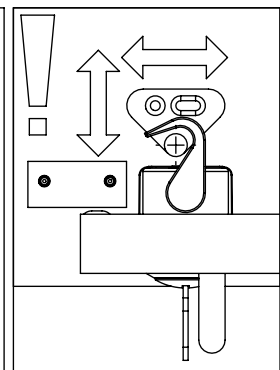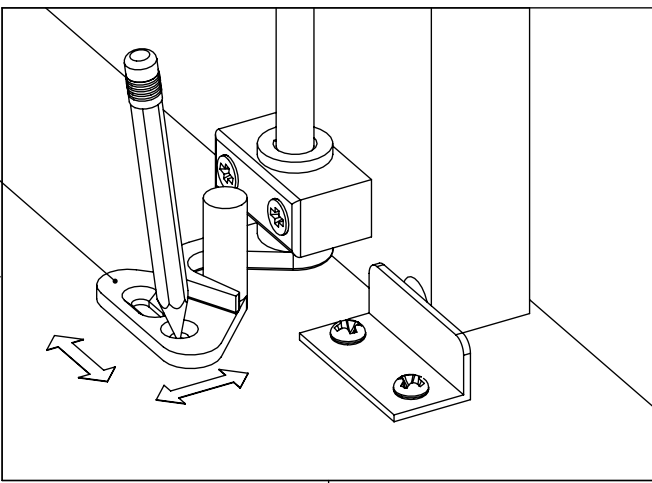

2)

10

